

INSTALLATION INSTRUCTIONS

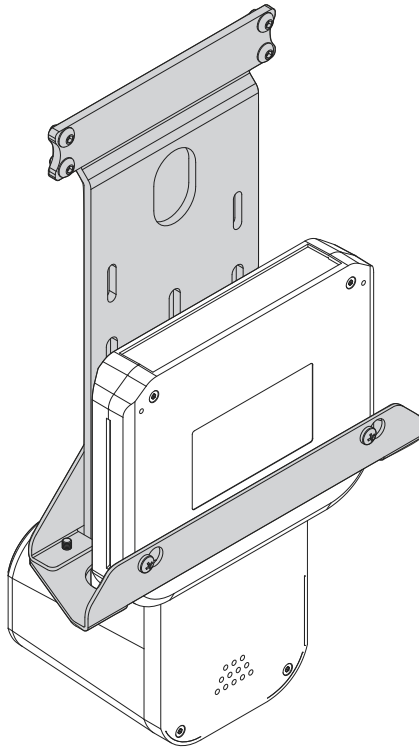

IntelliSHOT® Thinstall™ Camera Bracket

DISCLAIMER

Legrand | AV and its affiliated corporations and subsidiaries (collectively "Legrand | AV"), intend to make this manual accurate and complete. However, Legrand | AV makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Legrand | AV makes no representation of warranty, expressed or implied, regarding the information contained herein. Legrand | AV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief®, IntelliSHOT® and Thinstall™ are registered trademarks of Legrand AV Inc.

DEFINITIONS

MOUNTING SYSTEM: A MOUNTING SYSTEM is the primary Chief product to which an accessory and/or component is attached.

ACCESSORY: AN ACCESSORY is the secondary Chief product which is attached to a primary Chief product, and may have a component attached or setting on it.

COMPONENT: A COMPONENT is an audiovisual item designed to be attached or resting on an accessory or mounting system such as a video camera, CPU, screen, display, projector, etc.



WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.



CAUTION: A CAUTION alerts you to the possibility of

damage or destruction of equipment if you do not follow the corresponding instructions.



IMPORTANT SAFETY INSTRUCTIONS



WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all accessories are properly assembled and installed using the instructions provided.



WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all equipment and accessories mounted on each TA210E shelf does not exceed 10 lbs (4.54 kg) per bracket.



WARNING: Use this accessory only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.




WARNING: Never operate this accessory if it is damaged. Return the accessory to a service center for examination and repair.





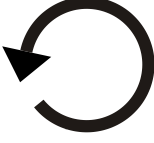






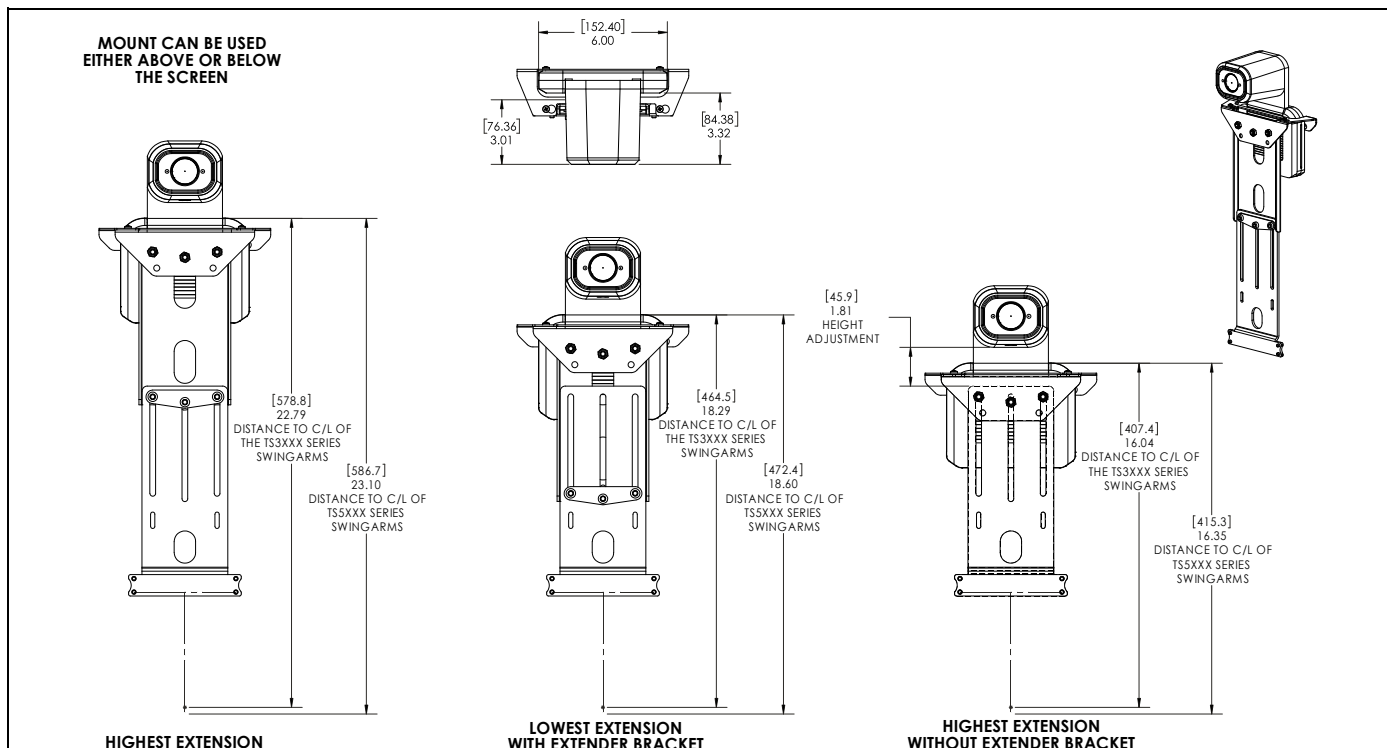


WARNING: Do not use this accessory outdoors.

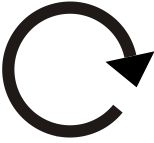--SAVE THESE INSTRUCTIONS--


DIMENSIONS




LEGEND

	Tighten Fastener Apretar elemento de fijación Befestigungsteil festziehen Apertar fixador Serrare il fissaggio Bevestiging vastdraaien Serrez les fixations		Pencil Mark Marcar con lápiz Stiftmarkierung Marcar com lápis Segno a matita Potloodmerkten Marquage au crayon
	Loosen Fastener Aflojar elemento de fijación Befestigungsteil lösen Desapertar fixador Allentare il fissaggio Bevestiging losdraaien Desserrez les fixations		Drill Hole Perforar Bohrloch Fazer furo Praticare un foro Gat boren Percez un trou
	Phillips Screwdriver Destornillador Phillips Kreuzschlitzschraubendreher Chave de fendas Phillips Cacciavite a stella Kruiskopschroevendraaier Tournevis à pointe cruciforme		Adjust Ajustar Einstellen Ajustar Regolare Afstellen Ajuster
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche		Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez
	By Hand A mano Von Hand Com a mão A mano Met de hand À la main		Optional Opcional Optional Opcional Opzionale Optie En option
	Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada Chiave esagonale Zeskantsleutel Clé à tête hexagonale		Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança Chiave di sicurezza Veiligheidssleutel Clé de sécurité

TOOLS REQUIRED FOR INSTALLATION

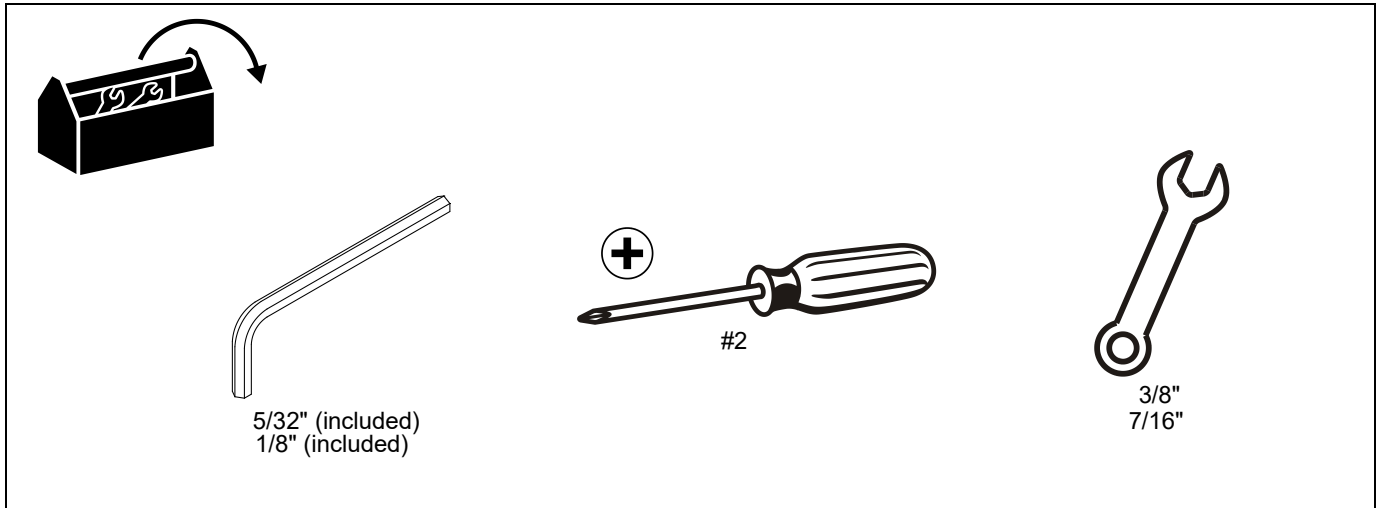

PARTS

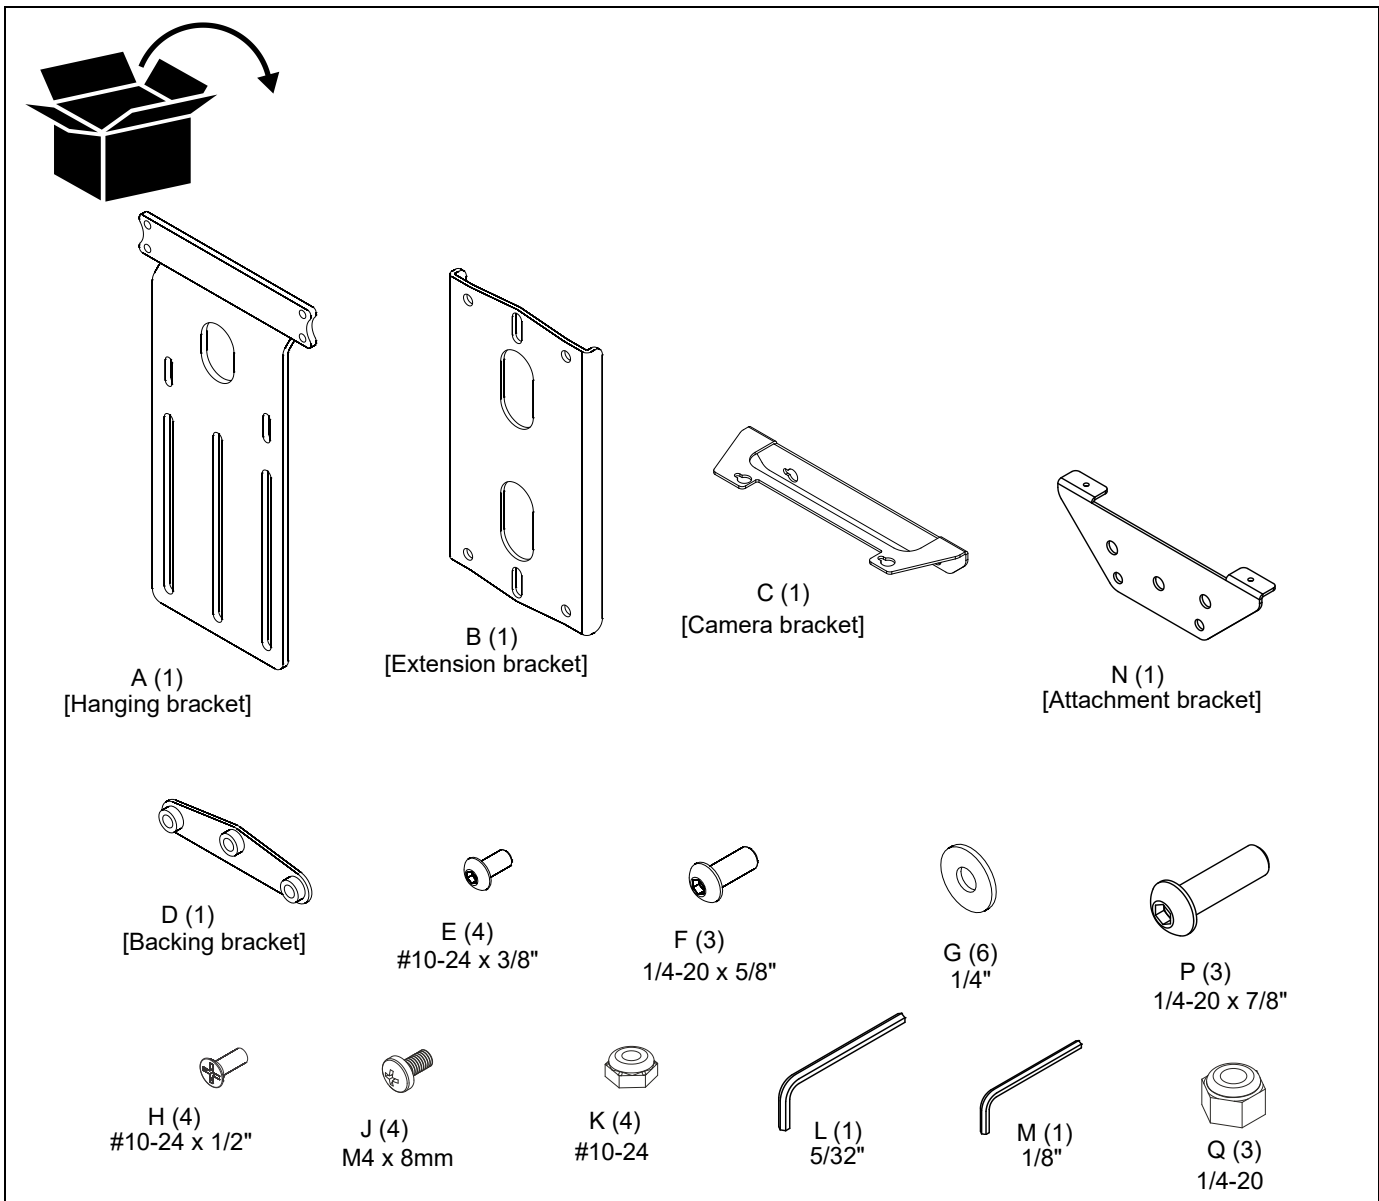

Installation

Shelf Assembly

1. Use three 1/4-20 x 7/8" button head cap screws (P), three 1/4" washers (G) and three 1/4"20 lock nuts (Q) to connect attachment bracket (N) to either extension bracket (B) or hanging bracket (A). (See Figure 1)

NOTE: Use extension bracket (B) for larger displays or if component needs to be mounted further from the display.

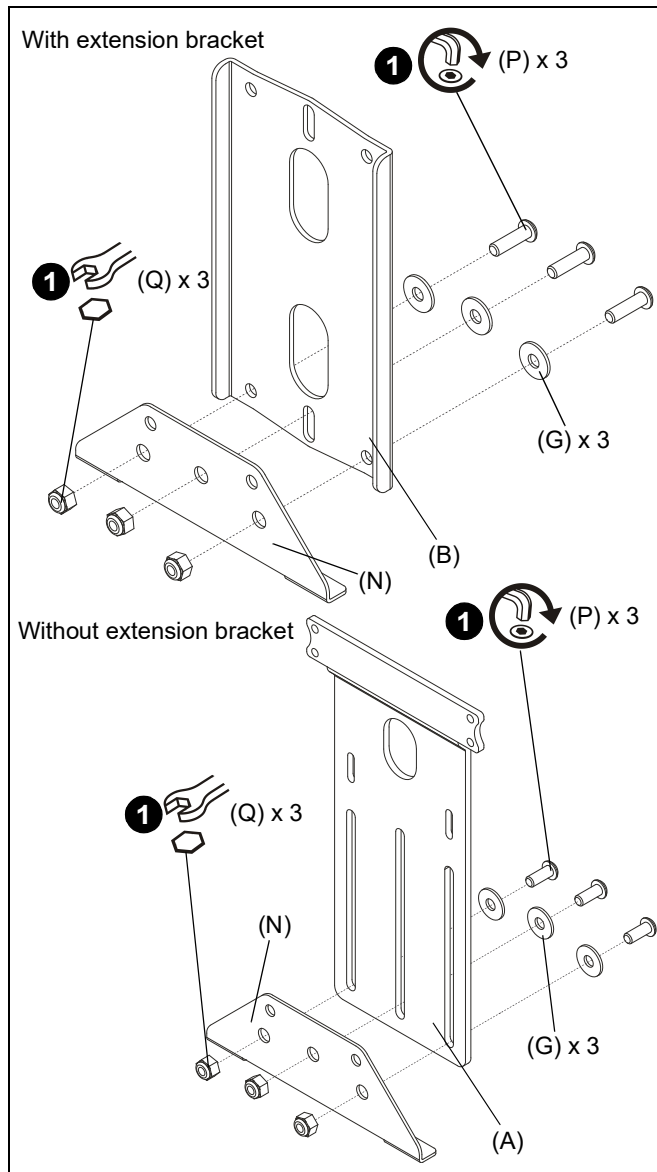


Figure 1

2. If using extension bracket, use three 1/4-20 x 5/8" button head cap screws (F) and three 1/4" washers (G) to attach extension bracket (B) to hanging bracket (A). (See Figure 2)

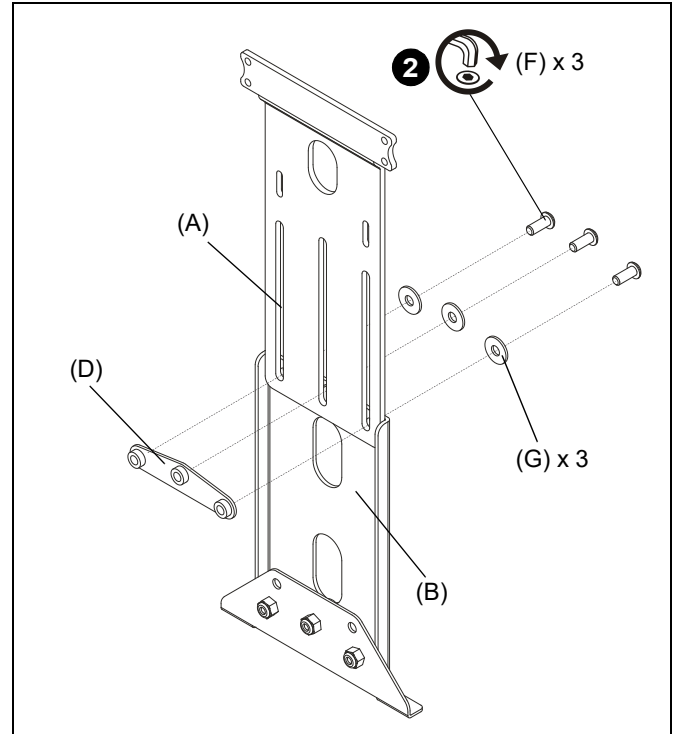


Figure 2

Installation to Faceplate

TS525 or iCF50 Installation

NOTE: Display does NOT have to be removed for bracket installation.

1. Use four #10-24 x 3/8" button head cap screws (E) to connect hanging bracket (A) to swing arm faceplate. (See Figure 3)

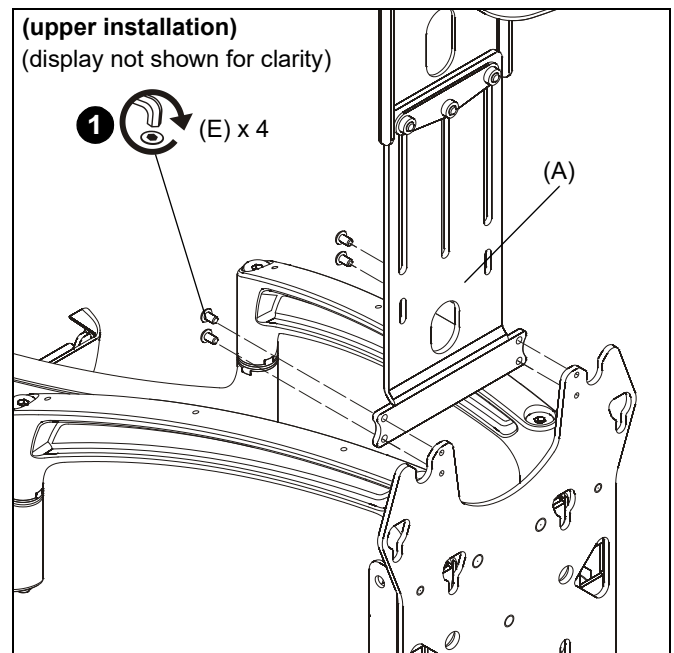


Figure 3

TS3XX or iCF30 Installation

1. If already installed, remove display from faceplate. See swing arm installation instructions for details.
2. Use four #10-24 x 1/2" Phillips head screws (H) and four #10-24 lock nuts (K) to connect hanging bracket (A) to faceplate. (See Figure 4) and (See Figure 5)

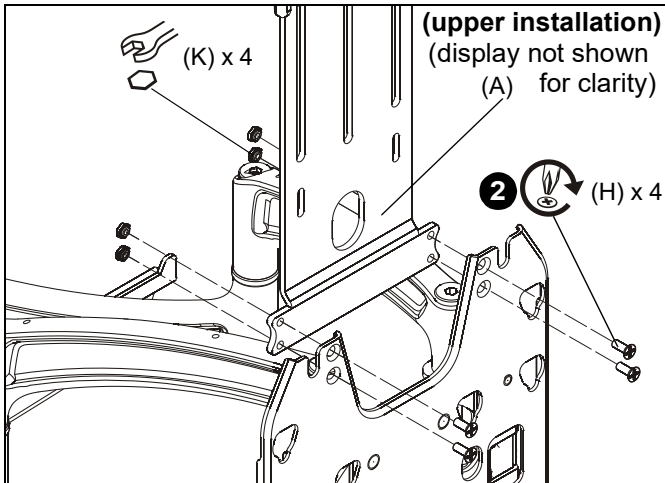


Figure 4

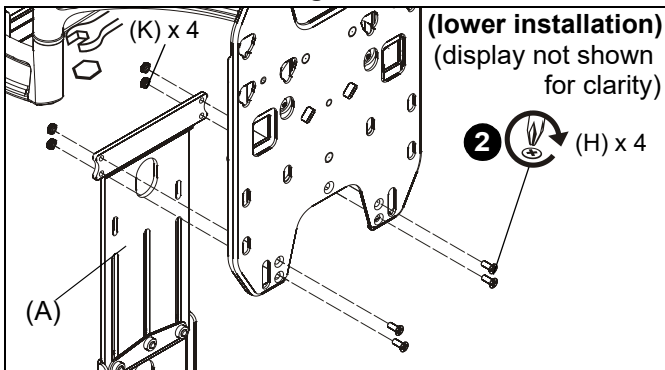


Figure 5

3. Reinstall display to faceplate. See swing arm installation instructions for details.

NOTE: If also installing side speaker brackets (TA300), hanging bracket (A) should also be attached to TA300 horizontal brackets for additional support. Use hardware provided with TA300. (See Figure 6)

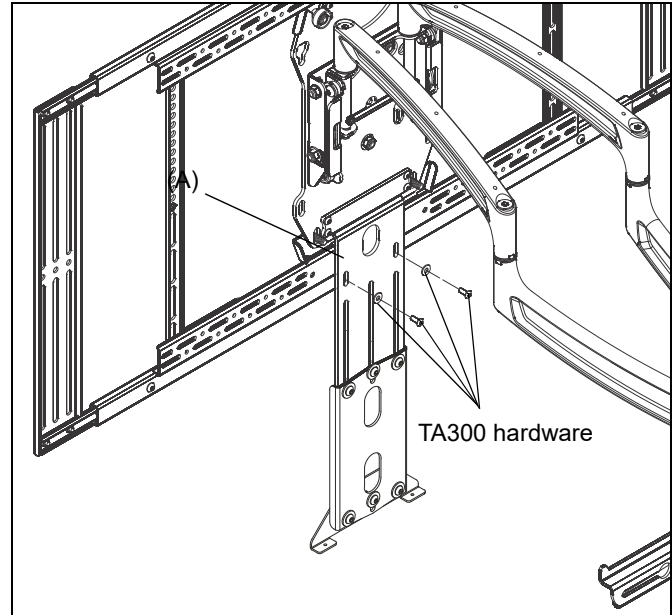


Figure 6

Camera/Component Installation



WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all equipment and accessories mounted on the TA210E brackets does not exceed 10 lbs (4.54 kg) per bracket.

1. Position camera (not included) inside camera bracket (C) so that camera mounting holes line up with keyholes on back of bracket. (See Figure 7)
2. Use two M4 x 8mm Phillips pan machine screws (J) to secure camera bracket (C) to camera. (See Figure 7)

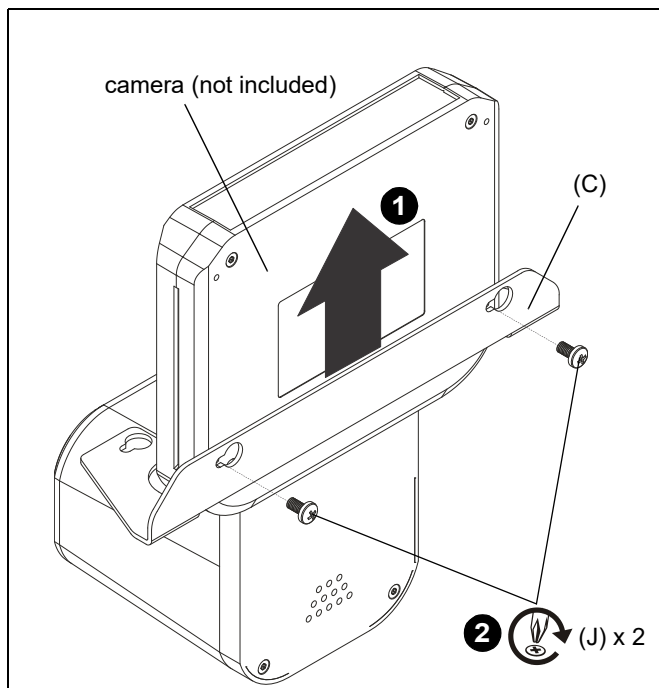


Figure 7

3. Loosely install two M4 x 8mm Phillips pan machine screws (J) into lower holes on attachment bracket (N). (See Figure 8)
4. Install camera to attachment bracket by placing keyholes on camera bracket (C) over screws installed in Step 3. (See Figure 8)
5. Tighten screws (J) to secure camera in position. (See Figure 8)

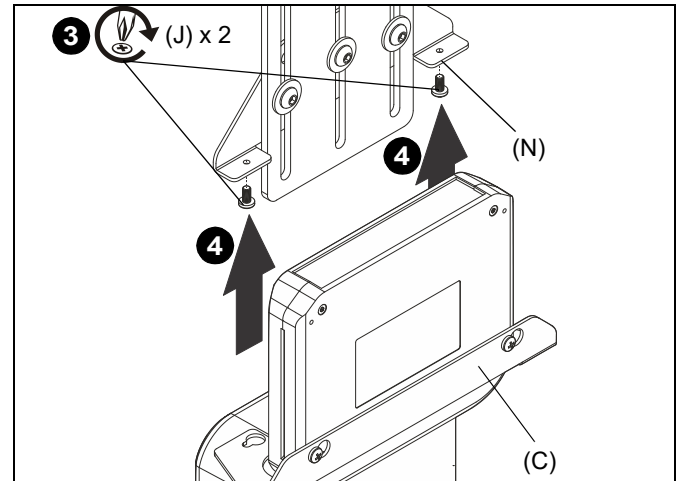


Figure 8

Adjustments

Height Adjustment

NOTE: Camera must be removed from mount prior to adjusting height.

1. Loosen three 1/4-20 x 5/8" button head cap screws (F) holding extension bracket (B) or camera bracket (C) to hanging bracket (A). (See Figure 9)
2. Adjust height of shelf (C) as desired.
3. Tighten three 1/4-20 x 5/8" button head cap screws (F) holding extension bracket (B) or camera bracket (C) to hanging bracket (A). (See Figure 9)

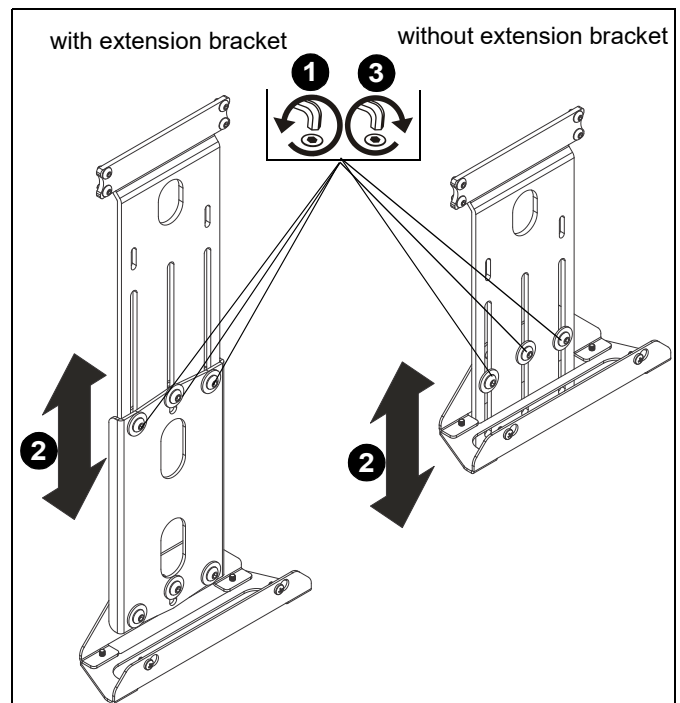


Figure 9



A brand of  **legrand**

8800-003233 Rev02
©2021 Legrand | AV
www.legrandav.com
11/2021

USA/International	A 6436 City West Parkway, Eden Prairie, MN 55344 P 800.582.6480 / 952.225.6000 F 877.894.6918 / 952.894.6918
Europe	A Franklinstraat 14, 6003 DK Weert, Netherlands P +31 (0) 495 580 852 F +31 (0) 495 580 845
Asia Pacific	A Office No. 918 on 9/F, Shatin Galleria 18-24 Shan Mei Street Fotan, Shatin, Hong Kong P 852 2145 4099 F 852 2145 4477

