

HOW CAN I CONTROL MY PDUS WITH

RACKLINK™?

CONTROL PDUS WITH RACKLINK™ VIA*:

- Native User Interface: Connect via IP to the built-in user interface to control the PDU from your computer, tablet or phone
- Control System: Connect via IP, RS-232, or Contact Closure to control the PDU with your control system
- Cloud: Connect directly to the cloud via a secure connection, or connect locally to a cloud agent that is communicating securely to the cloud
- RackLink Partnerships: Middle Atlantic has partnerships with leading control systems and cloud management services for out of the box integration, as well as an open API for compatibility any control system and cloud management service
- WiFi: Premium+ PDUs can connect via WiFi with a standard USB WiFi dongle
- RESTful API: Premium+ utilizes RESTful API for easy integration into any platform


*Control methods vary depending on PDU series (Premium+ and Select)

To Find Out More About RackLink™ visit: https://www.middleatlantic.com/racklink-technology.aspx

WHAT GREAT SYSTEMS ARE BUILD ON™ | legrandav.com

USA P 800.266.7225 E av.middleatlantic.support@legrand.com
CANADA P 888.766.9770 E av.middleatlantic.support@legrand.com

©2020 Legrand AV Inc. 200520 9/20 Middle Atlantic is a registered trademark of Legrand AV Inc. All other brand names or marks are used for identification purposes and are trademarks of their respective owners. All patents are protected under existing designations. Other patents pending.

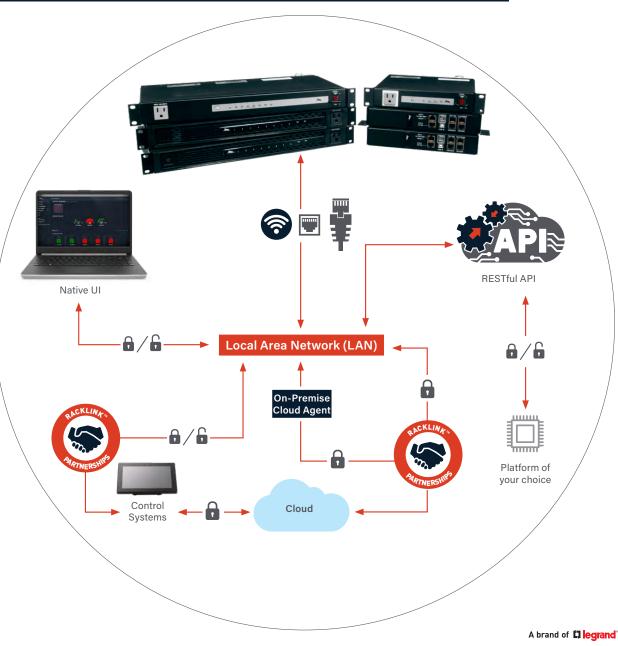

COMMERCIAL AV BRANDS