



INSTRUCTION BOOK FOR
Dry Erase Screen

PROJECTA

Preparation


Note: It requires two people to assemble a Dry Erase Screen. To maintain optimal projected image geometry and screen alignment, a flat and straight wall free from obstructions and angular distortions should be used.

Choose a clean work area for assembly using padded material or other soft, clean materials. The work area should be larger than the overall screen size and directly in front of the location where the screen is to be installed.


Tools Required For Assembly




Phillips Screwdriver

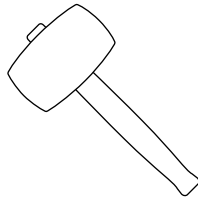

Rubber Mallet

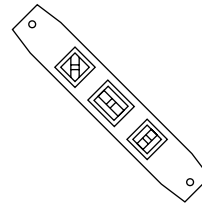


Level

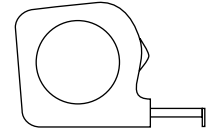


Measuring Tape

Hardware Provided

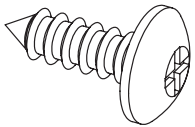

(7) Screws

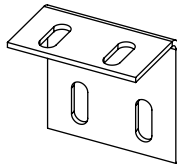

(2) L-Brackets



112 cm Wall Bracket

(2) 226, 239, 242 and 269 cm wide Screens



71 cm Wall Bracket

(2) 146, 163, 187, 203, 208 and 215 cm wide Screens

Assembly Instructions

1. Carefully unpack unit and place assembly on top of the clean work area. The viewing surface must face up.
2. Center aluminum tray to the bottom of frame and attach with (3) of the provided screws. Insert screws through the tray into the groove (Figure 1).

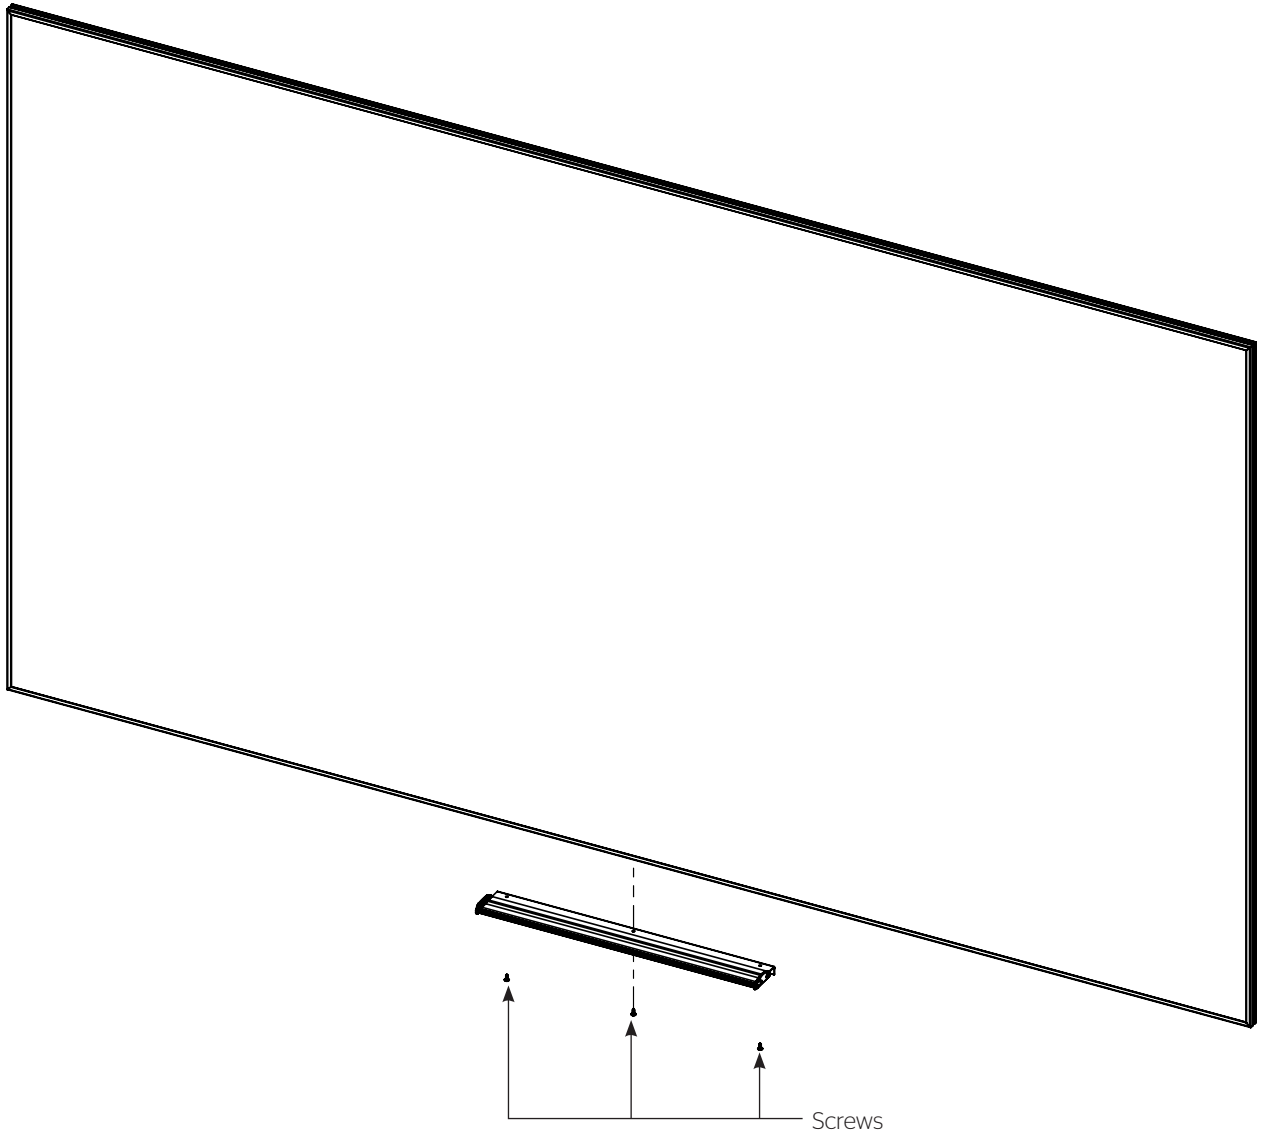


Figure 1

Wall Mounting Instructions

NOTE: The screen is shipped with two wall brackets. Screens in widths of 215 cm and below receive (2) 71 cm wall brackets. Screens above 215 cm in width receive (2) 112 cm wall brackets. Use appropriate mounting hardware for the wall type and to accommodate for the screen's hanging weight (Figure 2).

1. Secure the two wall brackets to wall studs at the desired height. The outside edge of each wall bracket must be no greater than 12,7 cm away from the left and right edges of the frame. You will need at least 2,5 cm clearance above the drilled holes to hang the screen (Figure 2).

2. To install the (2) L-brackets, you must measure the overall height of the screen frame and subtract 2,9 cm. Using that dimension, measure down from the top edge of the wall brackets and mark the wall for two screw holes. The outside edge of each L-bracket must be no greater than 12,7 cm away from the left and right edges of the screen frame (Figure 2).

3. Secure the two L-brackets to the wall at the marked locations. The longest side of the two L-brackets should be pointing upwards when secured in order to hide the L-brackets behind the screen frame once the screen is installed.


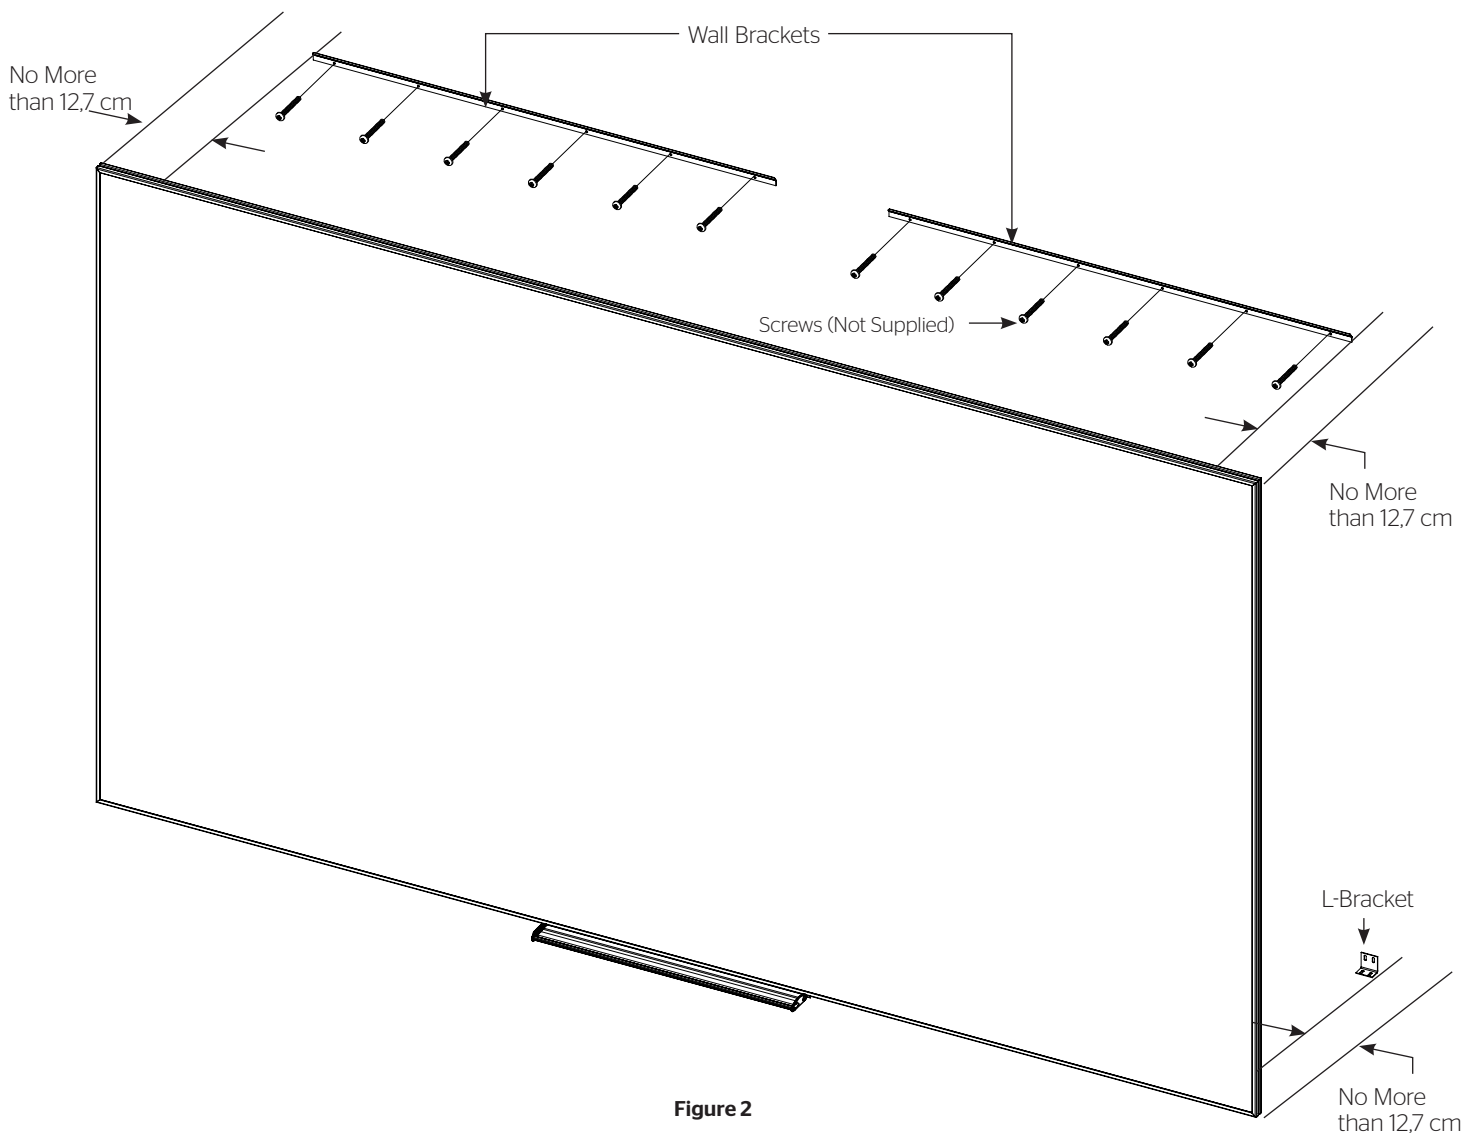


Figure 2

Wall Mounting Instructions (continued)

4. This step requires two people. Hang the screen on the wall brackets. There is a lip on the back of the frame that wedges itself into the wall brackets once fully installed. Ensure that the screen clears the L-brackets and that the screen weight is on the wall brackets, not the L-brackets.
5. Tap the bottom of the two L-brackets with the rubber mallet until they make contact with the frame. Secure the two L-brackets to the frame with the remaining (4) screws (Figure 3).
6. Attach bottom of screen to wall through the mounting holes located under the tray.

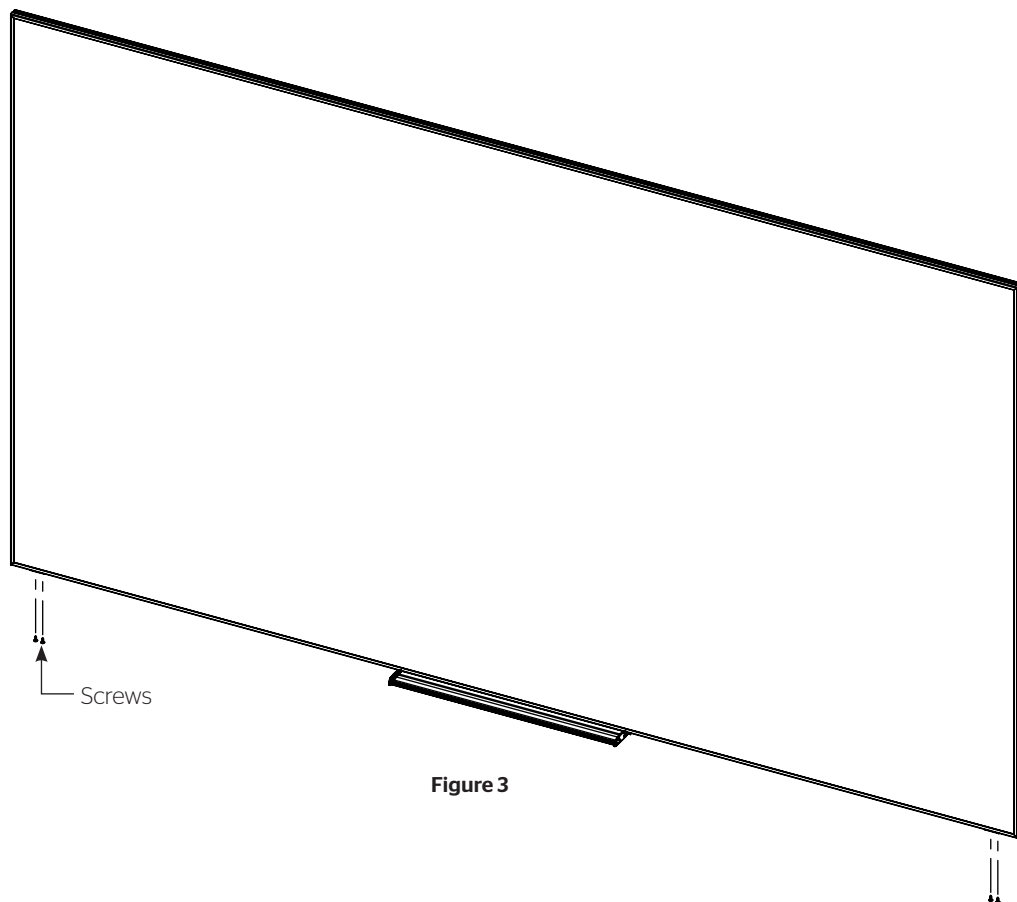

Cleaning

The supplied cleaning cloth can be used to clean marks on the screen surface made by everyday dry erase marker usage. Use clean or dry sections of the microfiber cloth when erasing the screen. This is important to prevent smearing on the screen while cleaning. To clean persistent marks from dry erase markers, use the supplied spray cleaner and cleaning cloth. Spray cleaner can be used to remove tough to clean or smeared areas. To clean permanent markers and other unintentional marks on the surface, use the supplied spray cleaner and cleaning cloth or a melamine foam cleaning pad.

PROJECTA

A Milestone AV Technologies Brand

Franklinstraat 14
6003 DK Weert
The Netherlands
P: +31 495 580 852
E: emea.dalite@milestone.com
www.da-lite.com

DL-0488 (Rev. 1) 07.15

© 2015 Milestone AV Technologies BV

24283