


INSTALLATION INSTRUCTIONS

SMA-651 INSTALLATION ADAPTER KIT FOR SMART-LIFT 236

The SMA-651 installation adapter kit allows you to attach the Smart-Lift (model SL-236) to threaded rods or cables for suspended ceiling mounting applications.

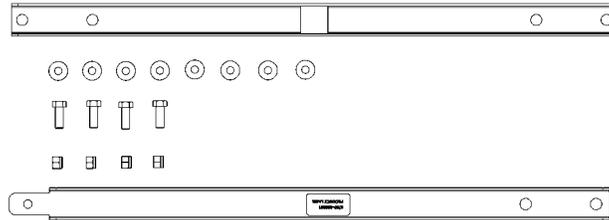

Unpack carton and check contents:

- | | |
|-----------------------------------|-------------------|
| (4) Bolt, hex head, 3/8 – 16 x 1” | (1) Rear Adapter |
| (4) Nut, Nylock, 3/8-16 | (1) Front Adapter |
| (8) Washer | |

CAUTION!!! The overhead support must be capable of supporting five times the combined weight of the lift and all equipment. If it cannot, it MUST be reinforced.

INSTALLATION INSTRUCTIONS

1. Make sure Smart-Lift is fully closed. Remove bottom panel of Smart-Lift.
2. Insert four 3/18-16 x 1” bolts and washers in holes in top of Smart-Lift (see Figure).
3. Secure two hanging rod adapters to the Smart-Lift using four Nylock nuts and washers as shown in the Figure below.
4. Reinstall bottom panel.
5. See *Smart-Lift Installation Instructions*.

