




INSTRUCTION BOOK FOR
Dry Erase Screen

Preparation

Note: It requires two people to assemble an IDEA Thin or IDEA Magnetic.

Choose a clean, flat work area that is larger than the frame for assembly.

Tools Required For Assembly

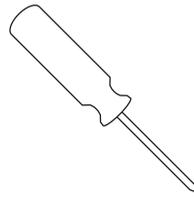

Phillips Screwdriver

Assembly Instructions

Carefully unpack unit and place frame assembly on top of a clean table. The viewing surface must face up.

Center aluminum tray to the bottom of frame and attach with the provided (5) #8 x 1/2" screws (Figure 1). Insert screws through the tray into the groove.

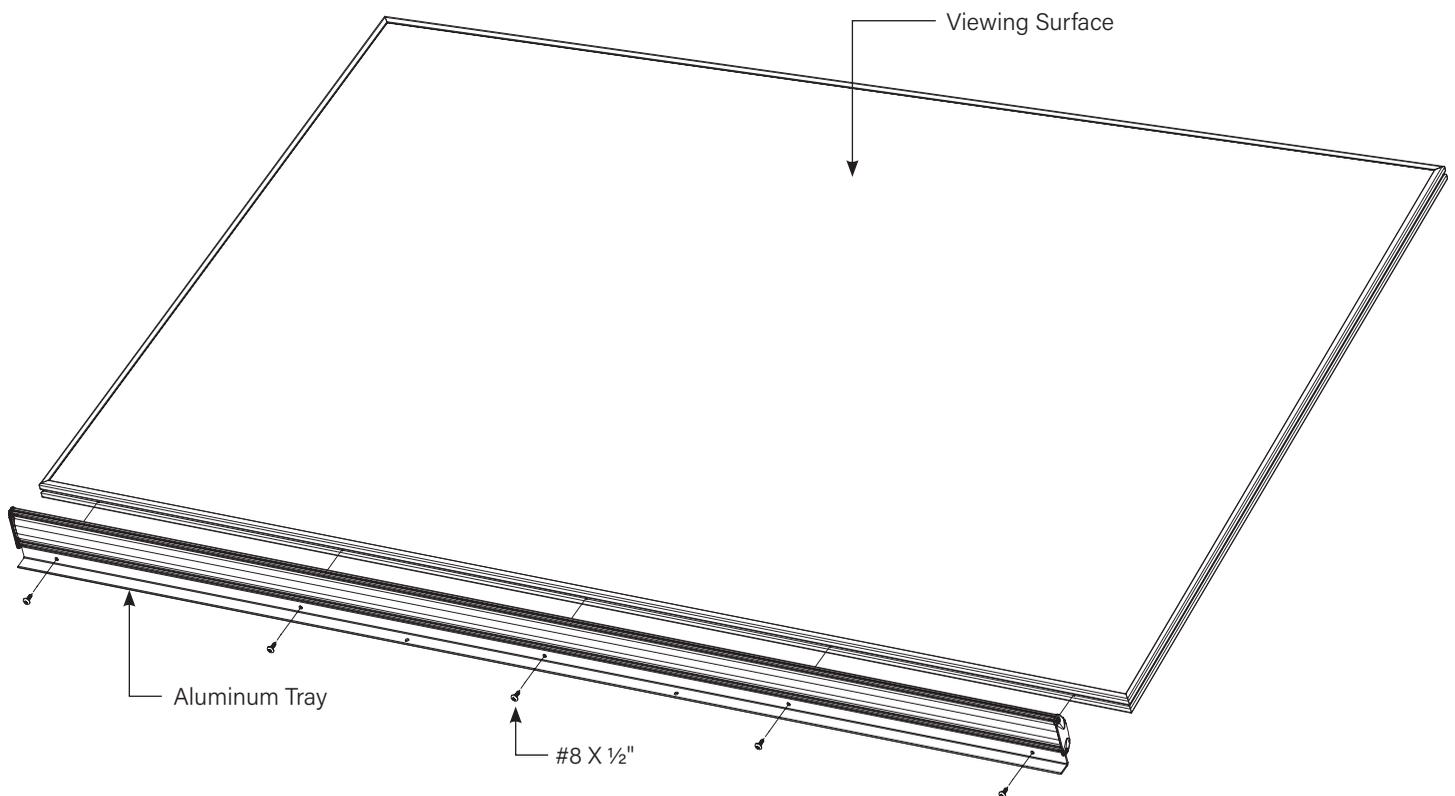


Figure 1

Wall Mounting

1. The screen is shipped with one 44" wall bracket. This bracket must be mounted to a flat surface into at least two wall studs.
2. Secure bracket to wall studs at the desired height. Make sure the bracket is level. Drill holes and attach mounting bracket to the wall. You will need at least 1" clearance above the drilled holes to hang the screen.
3. This step requires two people. Hang the screen on the wall bracket (Figure 2). There is a lip on the back of the frame that wedges itself into the wall bracket once fully installed.
4. Attach bottom of screen to wall with two screws. The bottom mounting holes are located under the tray (Figure 2).

Cleaning

The supplied cleaning cloth can be used to clean marks on the screen surface made by everyday dry erase marker usage. To clean persistent marks from dry erase markers, use the supplied Da-Lite spray cleaner and cleaning cloth. To clean permanent markers and other unintentional marks on the surface, use the supplied Da-Lite spray cleaner and cleaning cloth or a melamine foam cleaning pad.

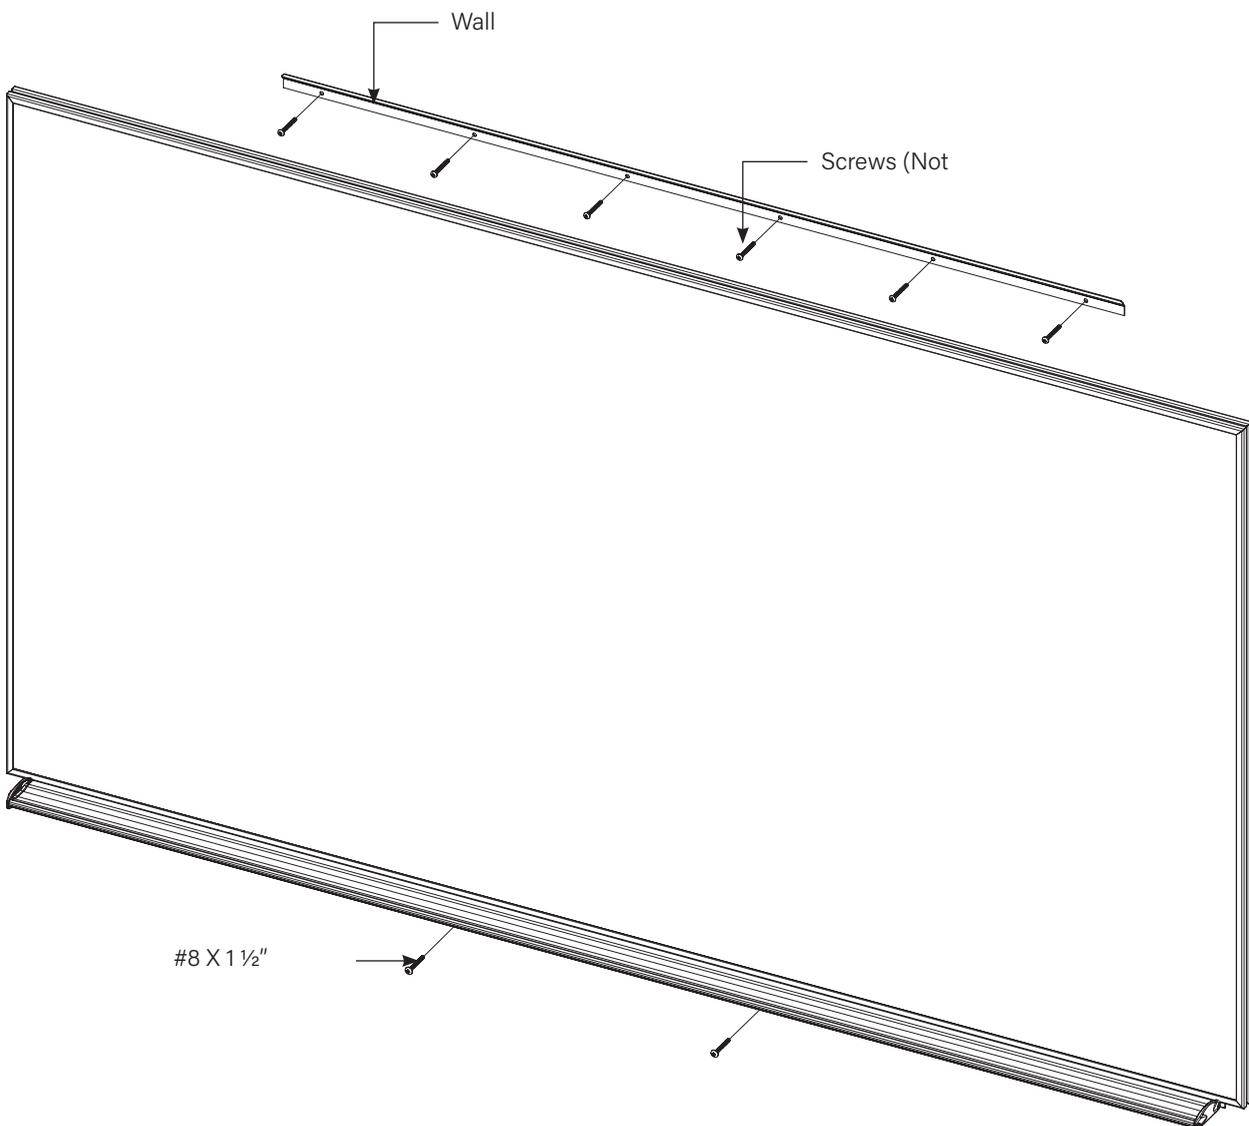


Figure 2

