
INSTRUCTION BOOK FOR
Plastic Cart Electrical
Assembly Instructions




Instructions

Tools Required

Screwdriver

Procedure

1. Remove contents from carton and examine parts.
2. Insert electrical outlets into handle. See Figure 1.
3. Use screws to secure angle to hold outlets in place.

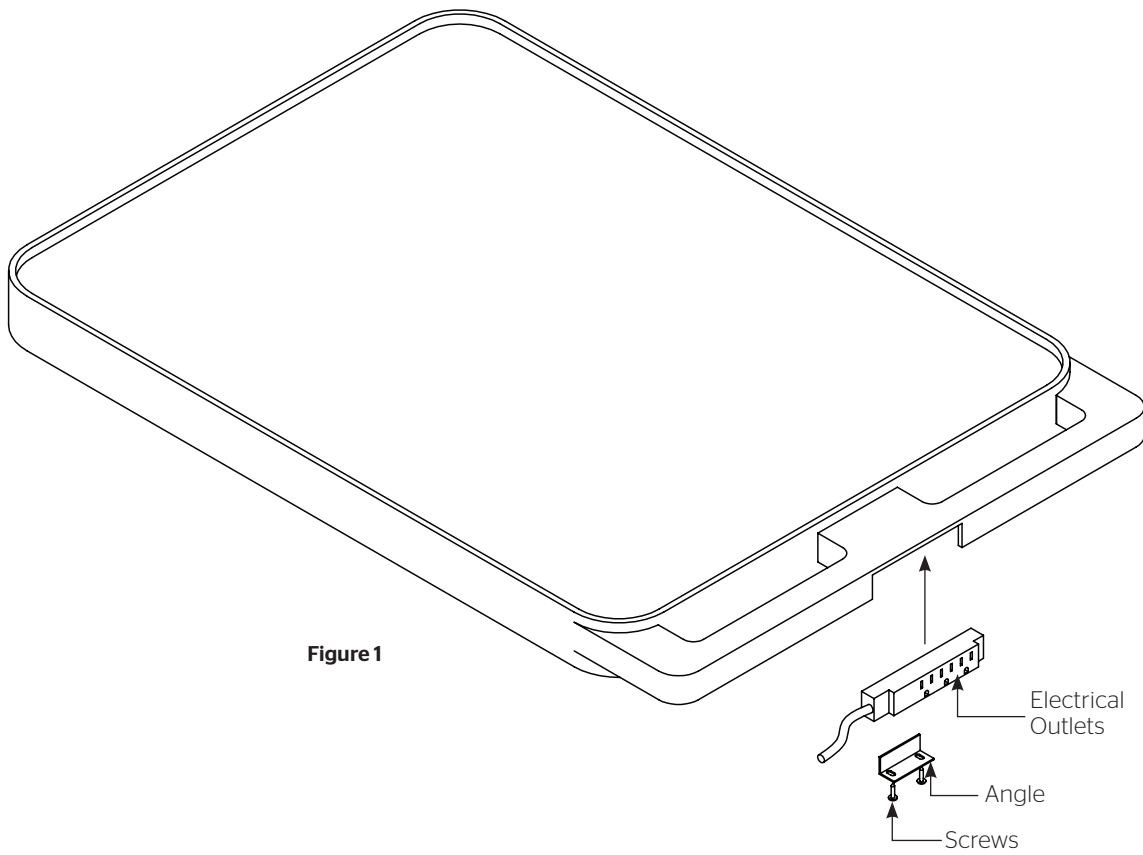

A Milestone AV Technologies Brand

3100 North Detroit Street
Warsaw, Indiana 46582
P: 574.267.8101 or 800.622.3737
F: 574.267.7804 or 877.325.4832
E: info@da-lite.com
www.da-lite.com

DL-0374 6.14

© 2014 Milestone AV Technologies LLC. Printed in U.S.A.

E-392