
INSTRUCTION BOOK FOR
Da-Lift Plenum Cover



Important Safety Instructions


When using your video equipment, basic safety precautions should always be followed, including the following:

1. Read and understand all instructions before using.
2. Position the cord so that it will not be tripped over, pulled, or contact hot surfaces.
3. If an extension cord is necessary, a cord with a current rating at least equal to that of the appliance should be used. Cords rated for less amperage than the appliance may overheat.
4. To reduce the risk of electric shock, do not disassemble this appliance. Contact an authorized service dealer when repair work is required. Incorrect reassembly can cause electric shock when the appliance is used subsequently.
5. The use of an accessory attachment not recommended by the manufacturer may cause a risk of fire, electric shock, or injury to persons.

Save These Instructions

If Da-Lift is installed in "other space used for environmental air", a plenum cover must be installed.

Suitable for Use in Other Environmental Air Space in Accordance with Section 300.22(c) of the National Electrical Code, and Sections 2-128, 12-010(3) and 12-100 of the Canadian Electrical Code, Part 1, CSA C22. 1.

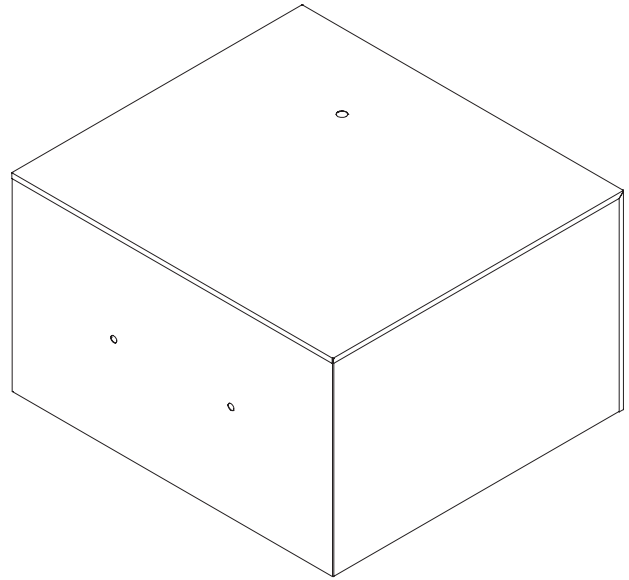

Suggested Methods of Installation

1. Carefully unpack Da-Lift projector lift.
2. Make sure to recheck measurements of projector lift location before installation.
3. Adjust bottom frame down and remove ceiling tile plate. See Figure 1.

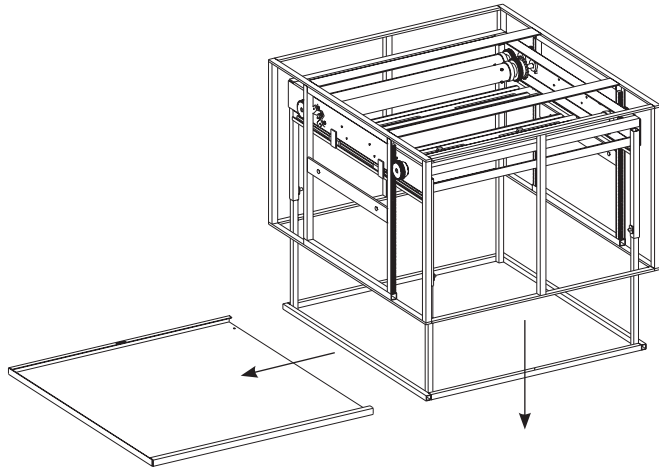


Figure 1

4. Attach plenum cover to Da-Lift and install unit into final position. See Figure 2.

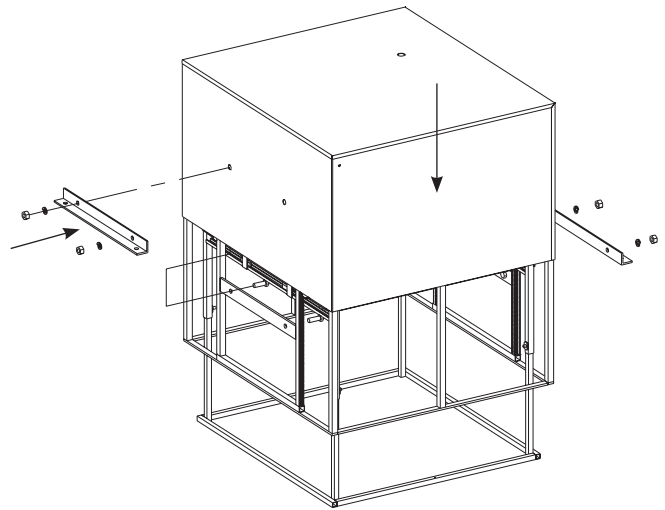


Figure 2

5. Electrically wire unit. Install ceiling tile plate. See Figure 3.

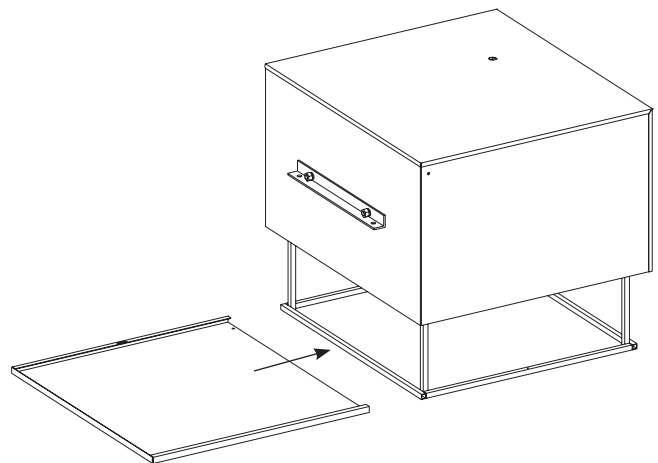


Figure 3



A Milestone AV Technologies Brand

3100 North Detroit Street

Warsaw, Indiana 46582

P: 574.267.8101 or 800.622.3737

F: 574.267.7804 or 877.325.4832

E: info@da-lite.com

www.da-lite.com

DL-0393 7.14

© 2014 Milestone AV Technologies LLC. Printed in U.S.A.

E-493