



SANUS®



THANK YOU FOR CHOOSING **SANUS**
THE #1 TV MOUNT BRAND IN THE US.


VSF409 Instruction Manual

Scan for easy
install video




SANUS MAGNETIC STUD FINDER

Designed to find your studs and make life easier – included in hardware kit.

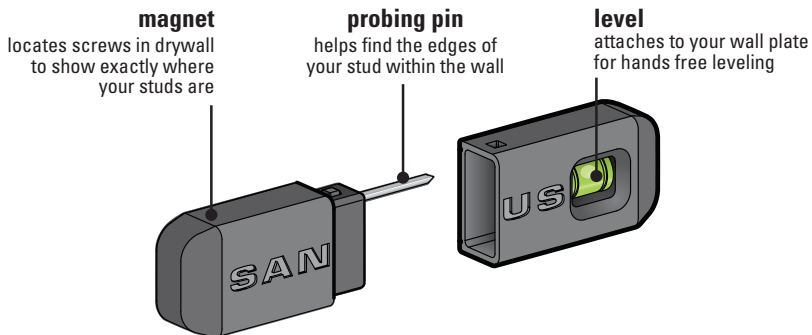


TWO SIMPLE STEPS TO FINDING YOUR STUDS:

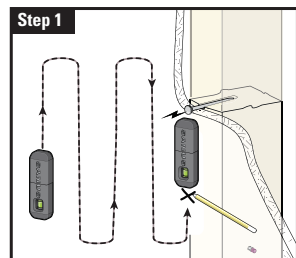

Holding it vertically, lightly move the SANUS Magnetic Stud Finder up and down while sliding across your wall. The magnet within will be attracted to the screws in the stud.


Once the magnet has landed on a screw, place a pencil mark on the wall directly below the magnet.

You can verify this is a stud by moving the Magnetic Stud Finder up or down to find a second or third screw within the wall.

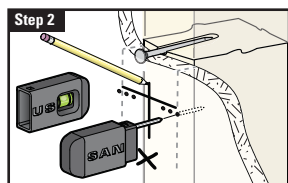

Pull apart the SANUS Magnetic Stud Finder to expose the probing pin within. Starting about $\frac{1}{2}$ inch away from the first pencil mark insert the probing pin into the wall every $\frac{1}{8}$ inch until it inserts completely into the wall. Once that happens, you know you've found one edge of your stud. Repeat this process till you have found the stud edges and center of the stud.

⚠ WARNING: This product contains a magnet. If an implanted medical device such as a pacemaker or implantable cardioverter defibrillator (ICD) is in use, magnetic fields may affect the operation of those devices, resulting in serious injury or death. If you have an implanted medical device, keep at least 13 cm (5in.) between your device and the magnet. Please consult with your physician or medical professional prior to using this product.

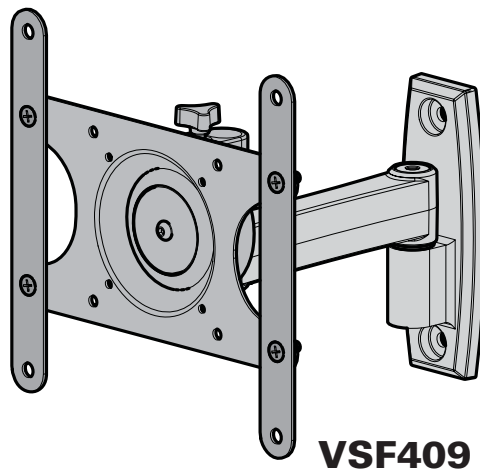

We'll Make It Stress-Free

If you have any questions along the way, just give us a call.
1-800-359-5520 (UK: 0800-056-2853) We're ready to help!

Lo haremos sin estrés

Si tiene preguntas mientras realiza la instalación, llámenos.
1-800-359-5520 (Reino Unido: 0800-056-2853) Estamos listos para ayudarlo.

IMPORTANT SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS – PLEASE READ ENTIRE MANUAL PRIOR TO USE

Before getting started, let's make sure this mount is perfect for you!


- 1** Does your TV weigh *more* than 50 lb (22.7 kg) including accessories?




No — Perfect!

Yes — This mount is NOT compatible. MountFinder.Sanus.com or call 1-800-359-5520 (UK: 0800-056-2853) to find a compatible mount.

- 2** What is your wall made of?

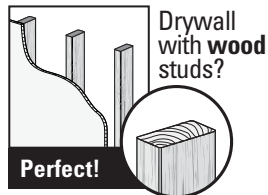


Drywall with wood studs?

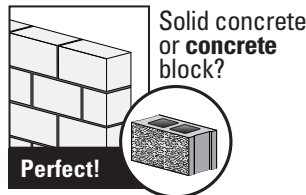

Solid concrete or concrete block?



- 3** Do you have all the tools needed?

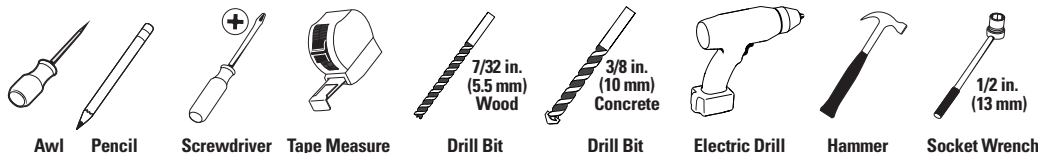

- 4** Ready to begin?

Please read through these instructions completely to be sure you're comfortable with this easy install process. Also check your TV owner's manual to see if there are any special requirements for mounting your TV.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, contact Customer Service at 1-800-359-5520 (UK: 0800-056-2853).

⚠ CAUTION: Avoid potential personal injuries and property damage!

- This product includes directions and hardware for use with wood stud, solid concrete and concrete block walls – DO NOT install into drywall alone.
- The wall must be capable of supporting five times the weight of the TV and mount combined.
- Do not use this product for any purpose not explicitly specified by manufacturer.
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use.



STEP 1 Attach Bracket to TV

Parts and Hardware for STEP 1



⚠ WARNING: This product contains small items that could be a choking hazard if swallowed.

Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!



📄 NOTE: Not all hardware included will be used.

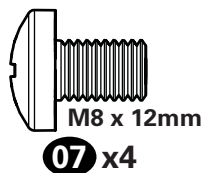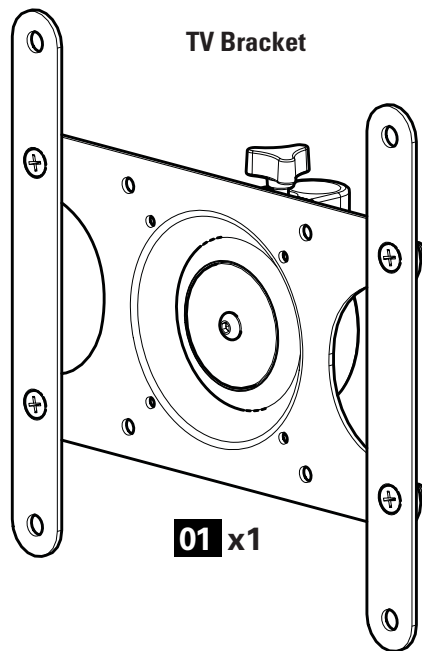


TV Screws

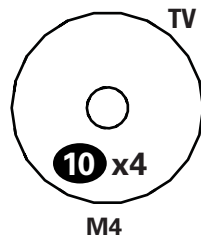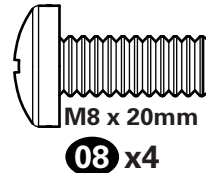

TV Washers

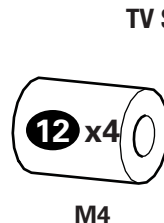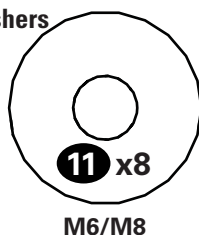


TV Spacers

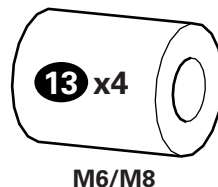


1-1 Select TV Screws

Hand thread screws into the threaded inserts on the back of your TV to determine which screw diameter (M4, M6, or M8) to use.

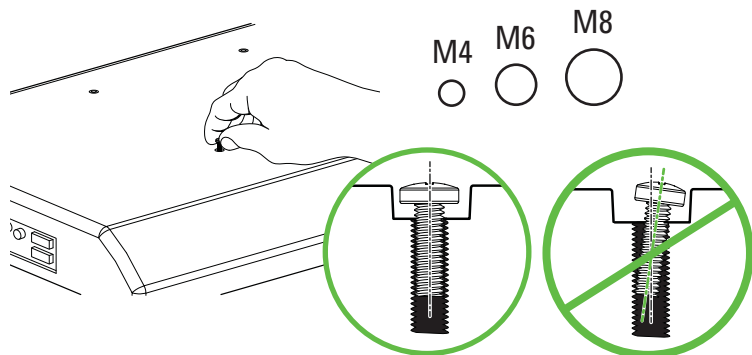

⚠ CAUTION: Verify adequate thread engagement of the screw/spacer combination on your TV.

Too short will not hold the TV and too long will damage the TV.

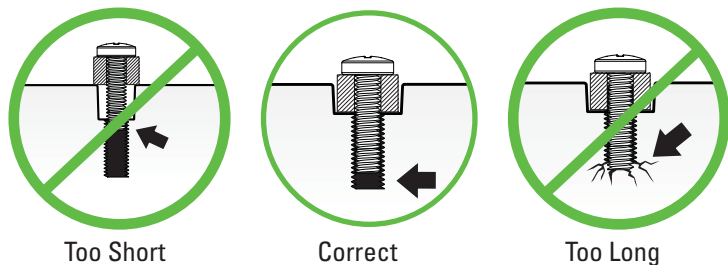


1-2 Spacers

a: If your TV has a flat back AND you want your TV closer to the wall, use the shorter screws.

b: Spacers and longer screws are supplied to accommodate:

- Round (irregular) back TVs
- TVs with inset mounting holes
- Extra space needed for cables

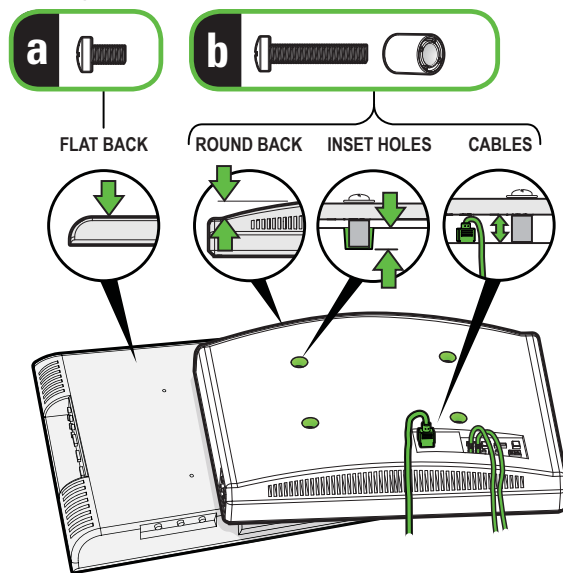


Standard configurations are shown. For special applications, or if you are uncertain about your hardware selection, contact Customer Service at 1-800-359-5520.

1-3 Measure Your TV Hole Pattern

Measure the width and height of your TV hole pattern in mm.

Record your measurements:

Width _____ mm x Height _____ mm

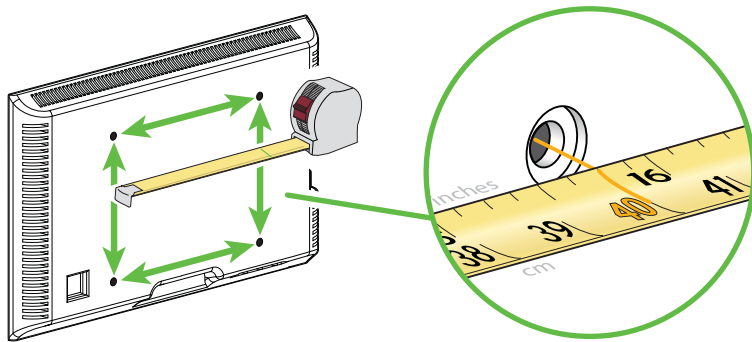


75 mm = 7.5 cm $\approx$ 3 in.


100 mm = 10 cm $\approx$ 4 in.

200 mm = 20 cm $\approx$ 7.87 in.


Inch dimensions approximate

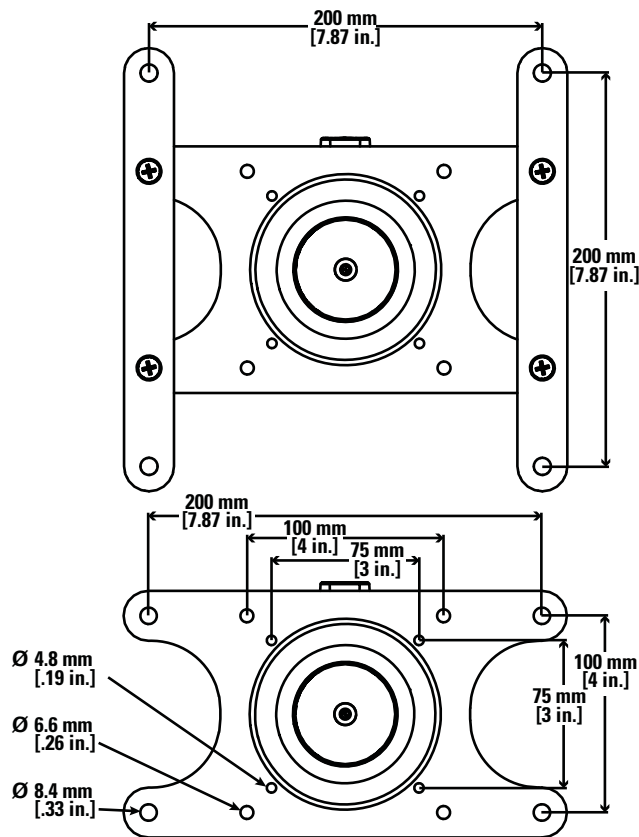


1-4 Attach TV Bracket with Extensions (200 x 200 mm ONLY)

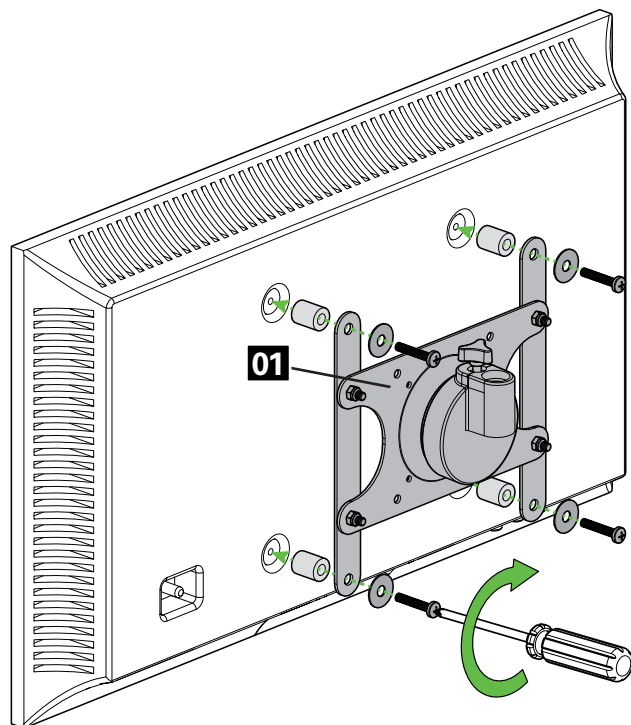


a M4/M6/M8 Flat Back

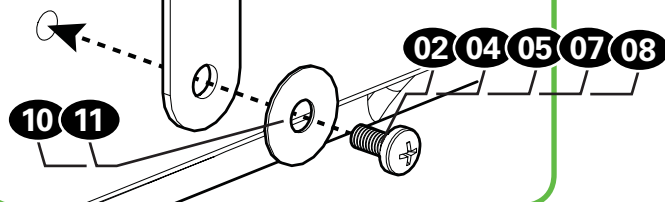

b M4 Round Back / Extra Space

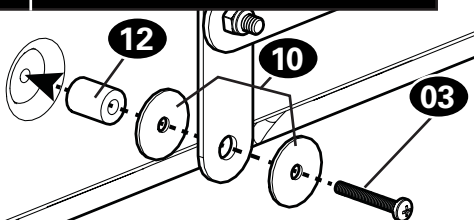


b M6/M8 Round Back / Extra Space

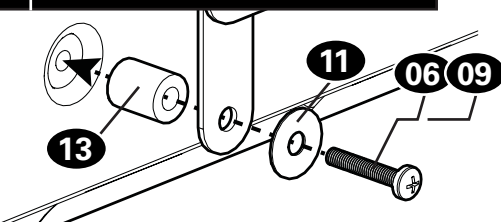


1-4 Remove Extensions - 200 x 100 mm, 100 x 100 mm, and 75 mm x 75 mm

If mounting to a TV with a 200 x 100 mm (7 7/8 x 4 in.), a 100 x 100 mm (4 x 4 in.), or a 75 x 75 mm (3 x 3 in.) hole pattern, remove the extension plates from the TV bracket **01** using a screwdriver and wrench.


 **NOTE:** Extension nuts are poly-locks and may need a wrench to remove.

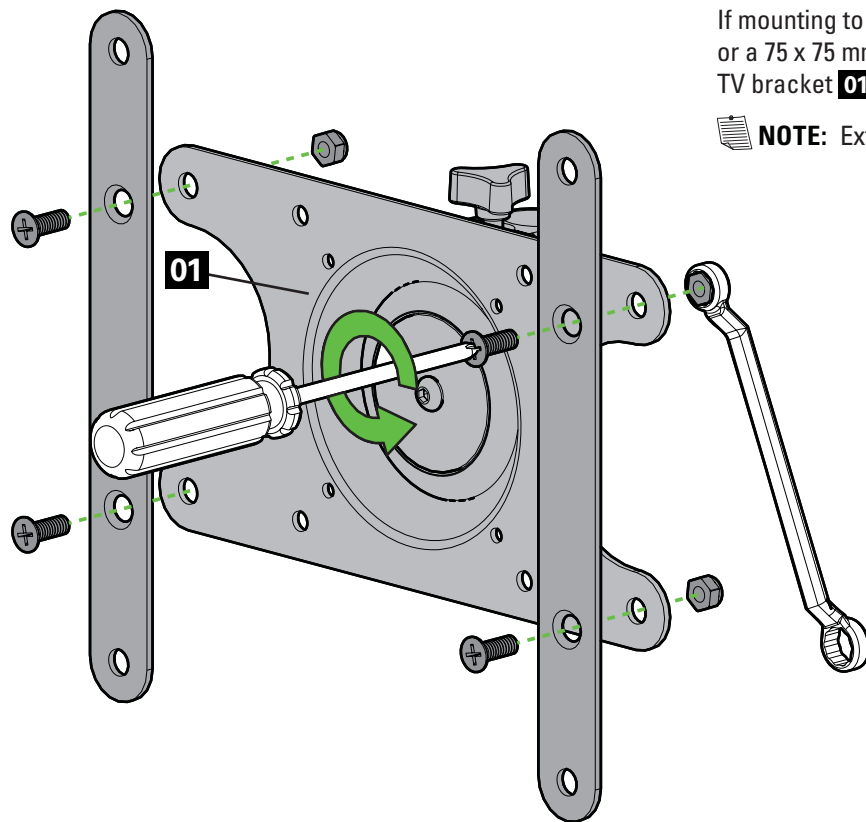


1-4 Attach TV Bracket 200 mm x 100 mm

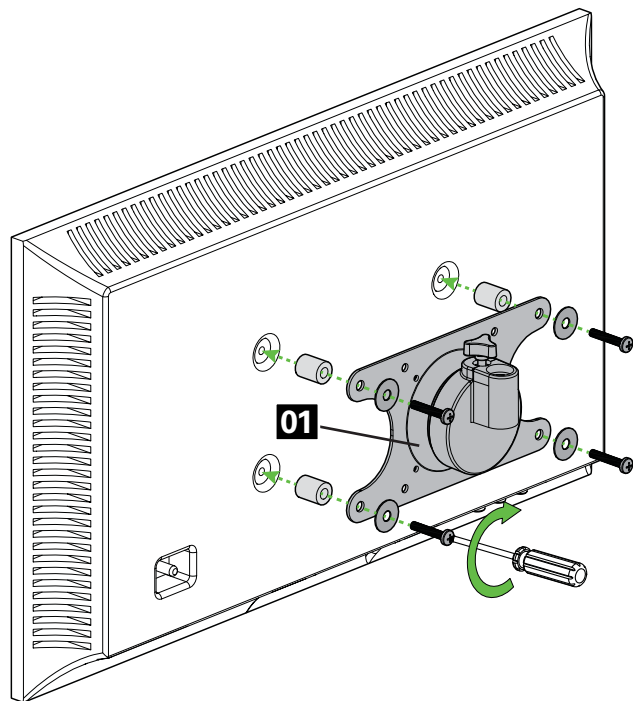


a M4/M6/M8 Flat Back

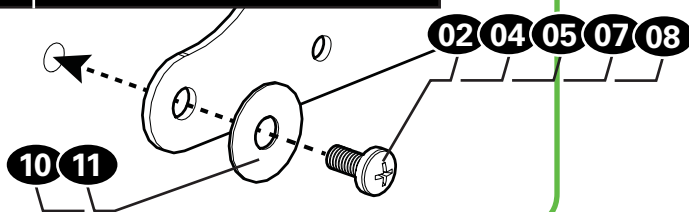


b M4 Round Back / Extra Space

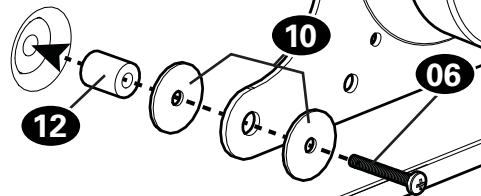

b M6/M8 Round Back / Extra Space

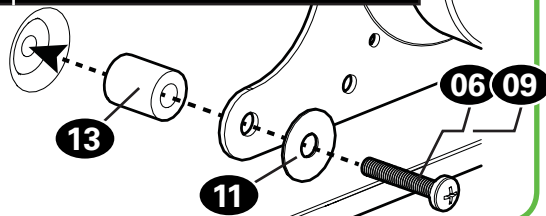


1-4 Attach TV Bracket 100 mm x 100 mm

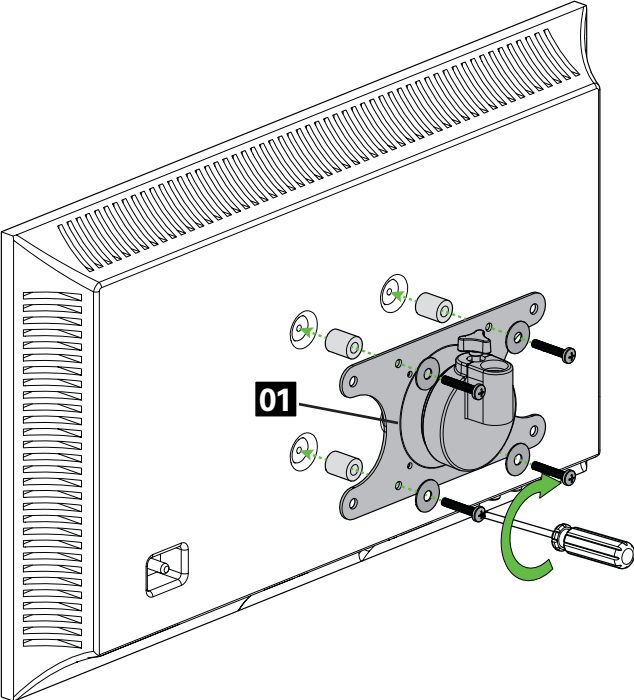


a

M4/M6 Flat back

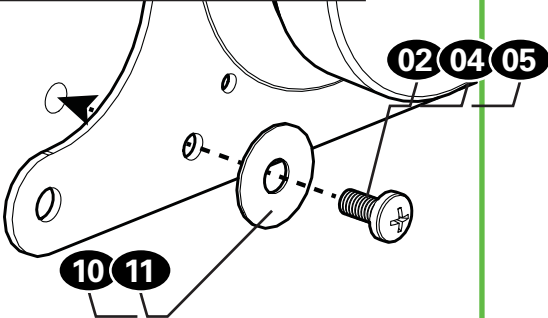

b


M4/M6 Round Back / Extra Space

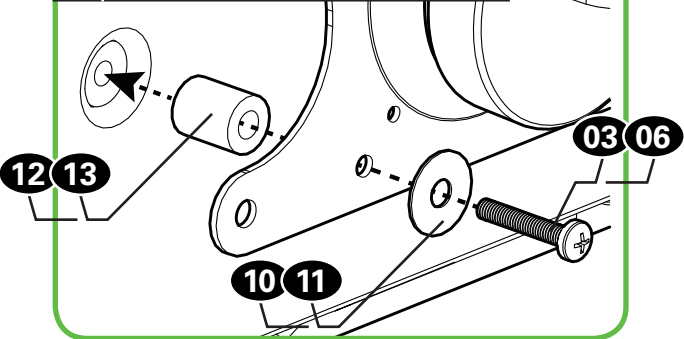

1-4 Attach TV Bracket 75 mm x 75 mm




NOTE: If the hole pattern on your TV is 75 x 75 mm, washers will not be used. Only M4 screws **02** and **03** can be used.

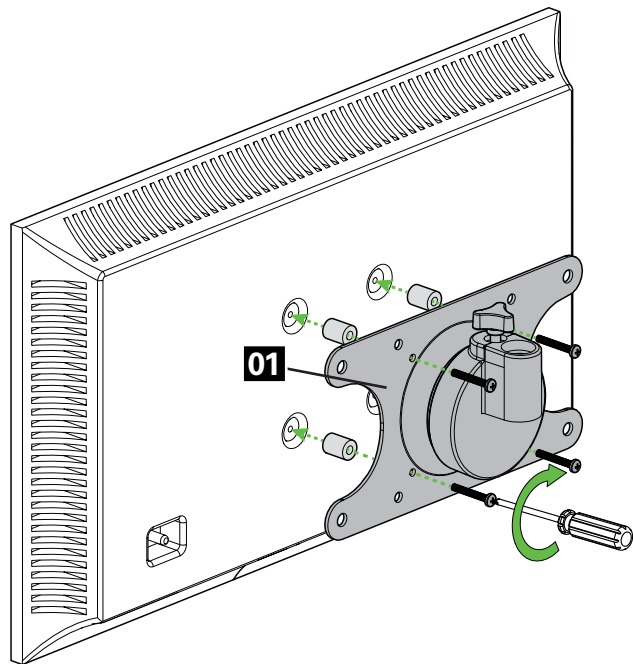


a

M4 Flat back

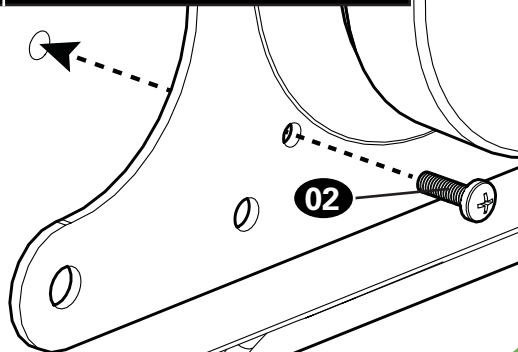

b

M4 Round Back / Extra Space

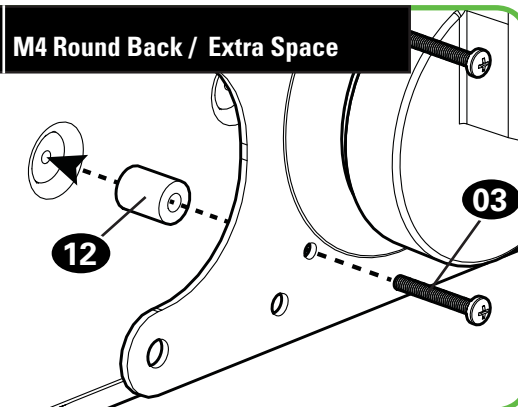

STEP 2 Attach Wall Plate to Wall

For wood stud installations, follow **STEP 2A** on **PAGE 9**

For concrete installations, follow **STEP 2B** on **PAGE 11**


Parts and Hardware for STEP 2

⚠ WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

*** ⚠ WARNING:** This product contains a magnet. If an implanted medical device such as a pacemaker or implantable cardioverter defibrillator (ICD) is in use, magnetic fields may affect the operation of those devices, resulting in serious injury or death. If you have an implanted medical device, keep at least 13 cm (5 in.) between your device and the magnet. Please consult with your physician or medical professional prior to using this product.


📄 NOTE: Not all hardware included will be used.

Wall Plate
Template

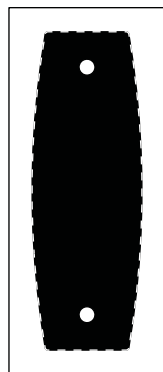


14 x1

Arm Assembly/Wall Plate

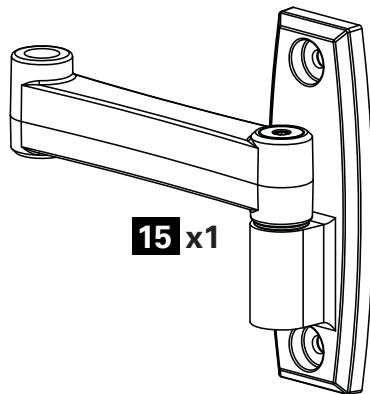


15 x1

Sanus Magnetic Stud Finder*

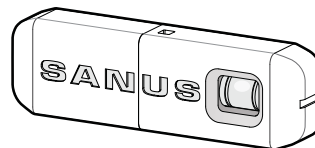


16 x1

Lag Bolts

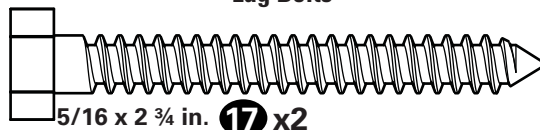


5/16 x 2 3/4 in. **17** x2

Lag Bolt Washers

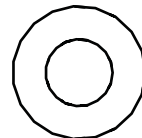

18 x2

Concrete Anchors



19 x2

Covers




20 x2

⚠ CAUTION: Avoid potential personal injuries and property damage!

- Drywall covering the wall must not exceed 16 mm (5/8 in.)
- Minimum wood stud size: common 51 x 102 mm (2 x 4 in.) nominal 38 x 89 mm (1½ x 3½ in.)
- Stud center must be verified

1. Locate a nail/screw in the stud using the Sanus magnetic stud finder* **16** provided.
2. Find the edges of the stud using the probe of the stud finder **16**.
3. Mark the center of the stud with pencil.

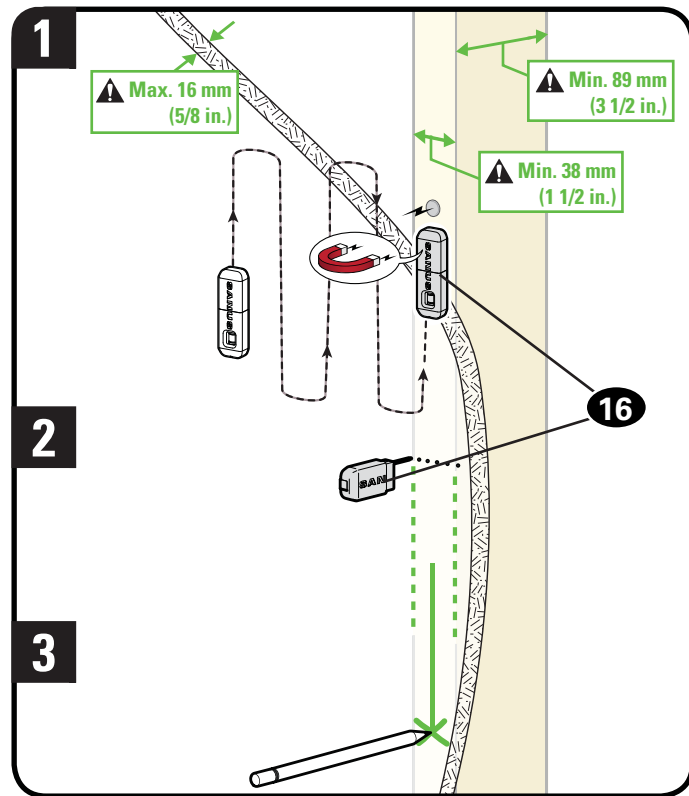

*** ⚠ WARNING:** This product contains a magnet. If an implanted medical device such as a pacemaker or implantable cardioverter defibrillator (ICD) is in use, magnetic fields may affect the operation of those devices, resulting in serious injury or death. If you have an implanted medical device, keep at least 13 cm (5 in.) between your device and the magnet. Please consult with your physician or medical professional prior to using this product.

4. Place the wall plate template **14** at your desired height and position the slotted holes over your stud center line. Level the wall plate template **14** and tape in place.

 **NOTE:** For assistance in determining wall plate location, see HeightFinder at sanus.com.

 **IMPORTANT:** Be sure you mark and drill into the center of the stud.




5. Drill the two pilot holes using a 5.5 mm (7/32 in.) diameter drill bit.

 **IMPORTANT:** Pilot holes must be drilled to a depth of 75 mm (3 in.).

6. Remove the wall plate template **14**. Tighten lag bolts **17** only until the washers **18** are pulled firmly against the wall plate **15**.

 **CAUTION:** Improper use could reduce the holding power of the lag bolt. To avoid potential injuries or property damage Do not over-tighten the lag bolts **17**.

Fit lag bolt covers **20** over lag bolts **17**.

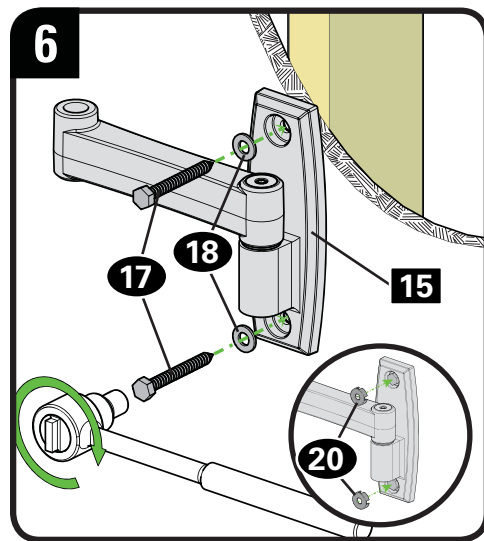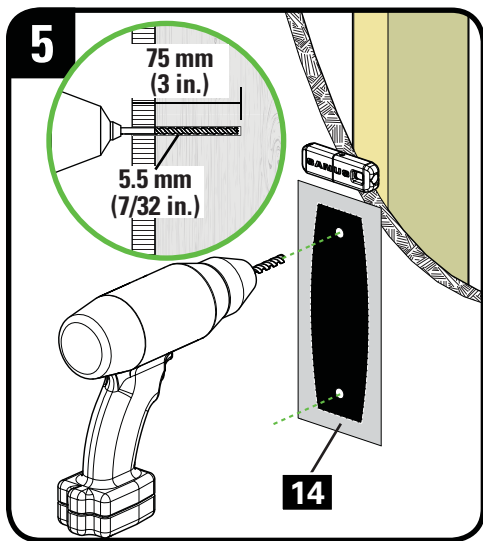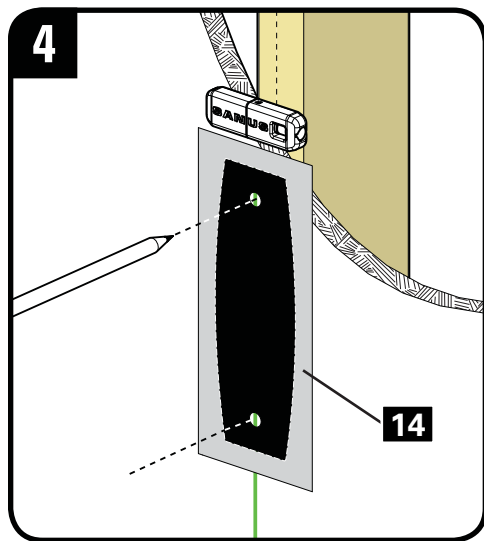

STEP 2B

Solid Concrete or Concrete Block Option

⚠ CAUTION: Avoid potential personal injuries and property damage!

- Mount the arm assembly/wall plate **15** directly onto the concrete surface
- Minimum solid concrete thickness: 203 mm (8 in.)
- Minimum concrete block size: 203 x 203 x 406 mm (8 x 8 x 16 in.)

1. Position the wall plate template **14** on the wall at your desired height. Level the wall plate template and mark the hole locations.




 **NOTE:** For assistance in determining wall plate location, see Height Finder at sanus.com.

2. Drill two pilot holes using a 10 mm (3/8 in.) diameter drill bit.



! IMPORTANT: Pilot holes must be drilled to a depth of 75 mm (3 in.). Never drill into the mortar between blocks.

3. Remove the wall plate template **14** and insert two anchors **19**.

⚠ CAUTION: Be sure the anchors **19** are seated flush with the concrete surface.

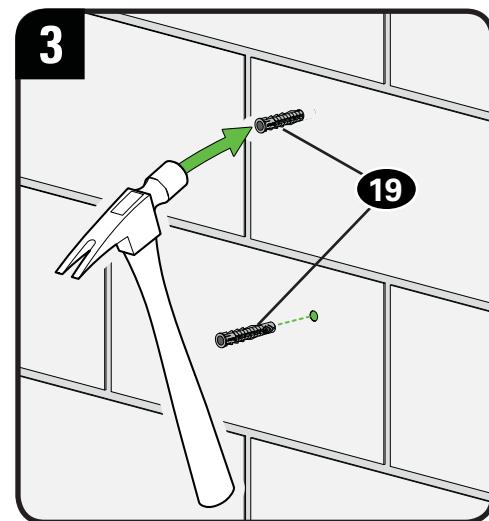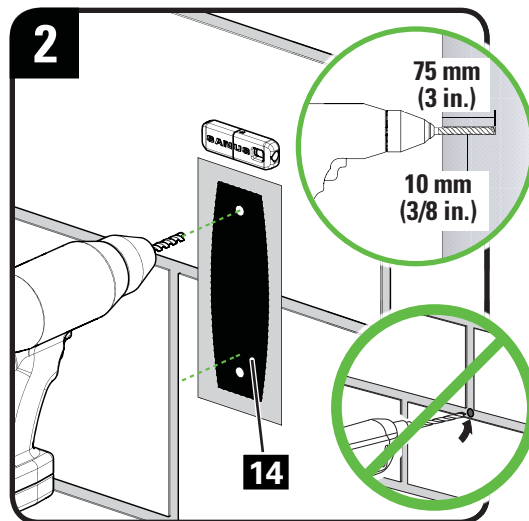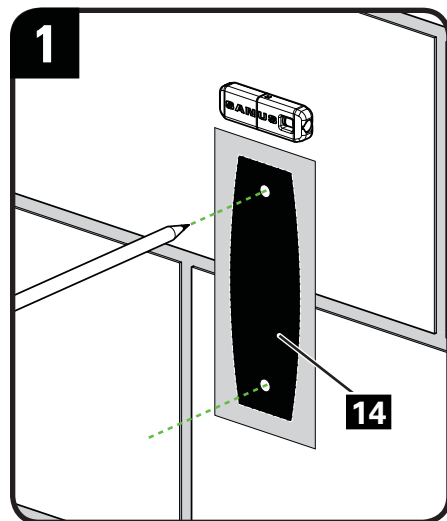

4. Remove the wall plate template **14**. Tighten lag bolts **17** only until the washers **18** are pulled firmly against the wall plate **15**.
⚠ CAUTION: Improper use could reduce the holding power of the lag bolt. To avoid potential injuries or property damage Do not over-tighten the lag bolts **17**.
5. Fit lag bolt covers **20** over lag bolts **17**.

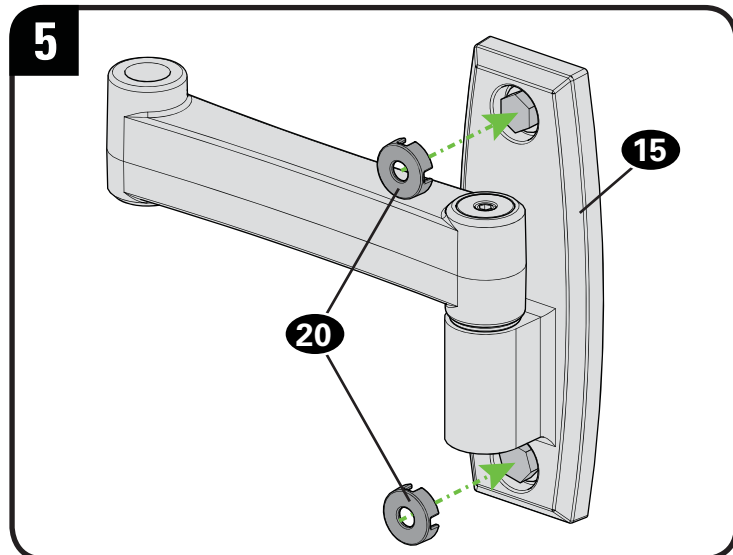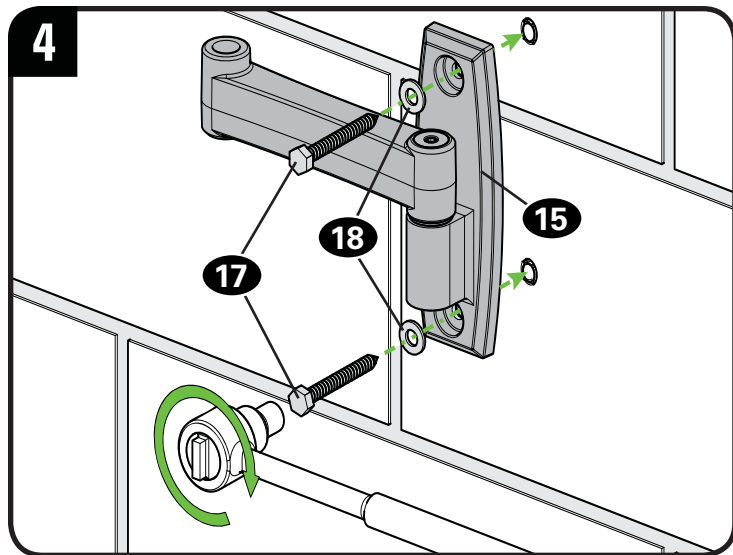

STEP 3 Hang TV Mount to Arm

Parts and Hardware for STEP 3

⚠ WARNING: This product contains small items that could be a choking hazard if swallowed.

Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

Cover




20 x2

Pivot Pin



21 x1

Large Washer

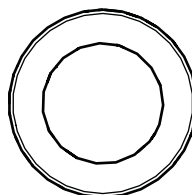

22 x1

Mounting Bolt Nut



23 x1

Mounting Bolt



1/4-20 x 3 1/4 in.


24 x1

Spacer




25 x1

Washer



26 x2

5/32 in. Hex Key

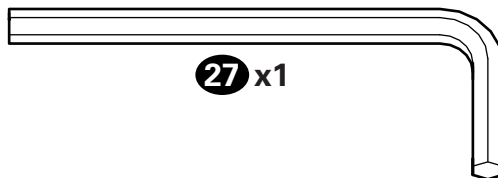

27 x1

STEP 3 Hang TV Mount to Arm

1. Fit nut **23** and cover **20** into underside of mount arm **15**.
2. Place washer **22** and pivot pin **21** onto mount arm **15**.
3. Fit the bracket **01** onto pivot pin **21**. Slide washers **26** and spacer **25** onto mounting bolt **24** and fit bolt through mounting bracket **01** and pivot pin **21** until it meets nut **23**. Fit cover **20** over mounting bolt.







HEAVY! You may need assistance with this step.

4. Use hex key **27** to tighten mounting bolt **24** and secure mounting bracket to arm.




NOTE: You may need to hold the mounting nut **23** in place as you are tightening the bolt **24**.

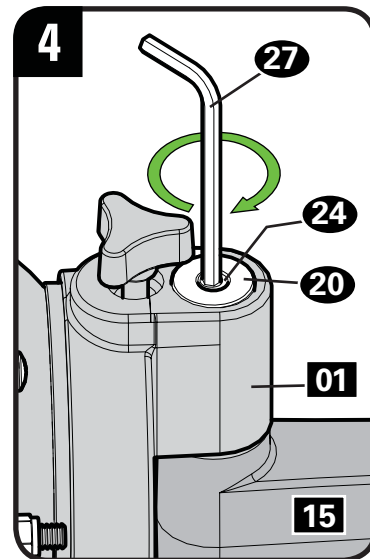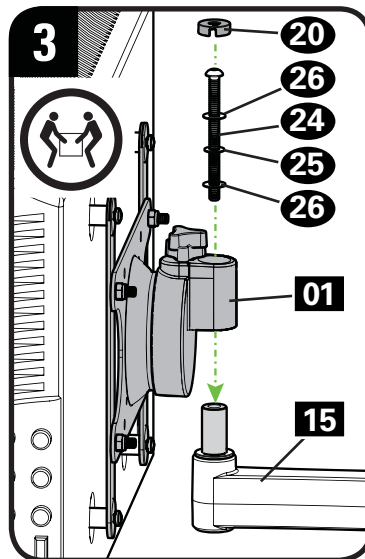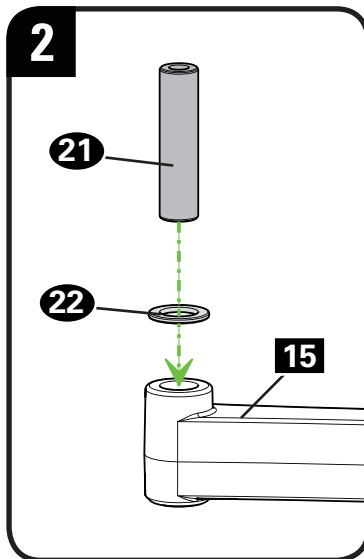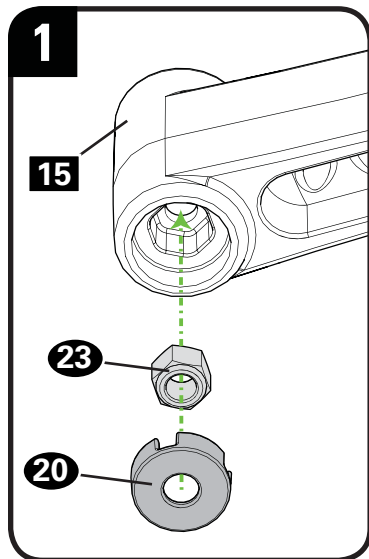

Adjustments

- Use hex key **27** to adjust arm extension tension.
- Adjust rotation/level tension.

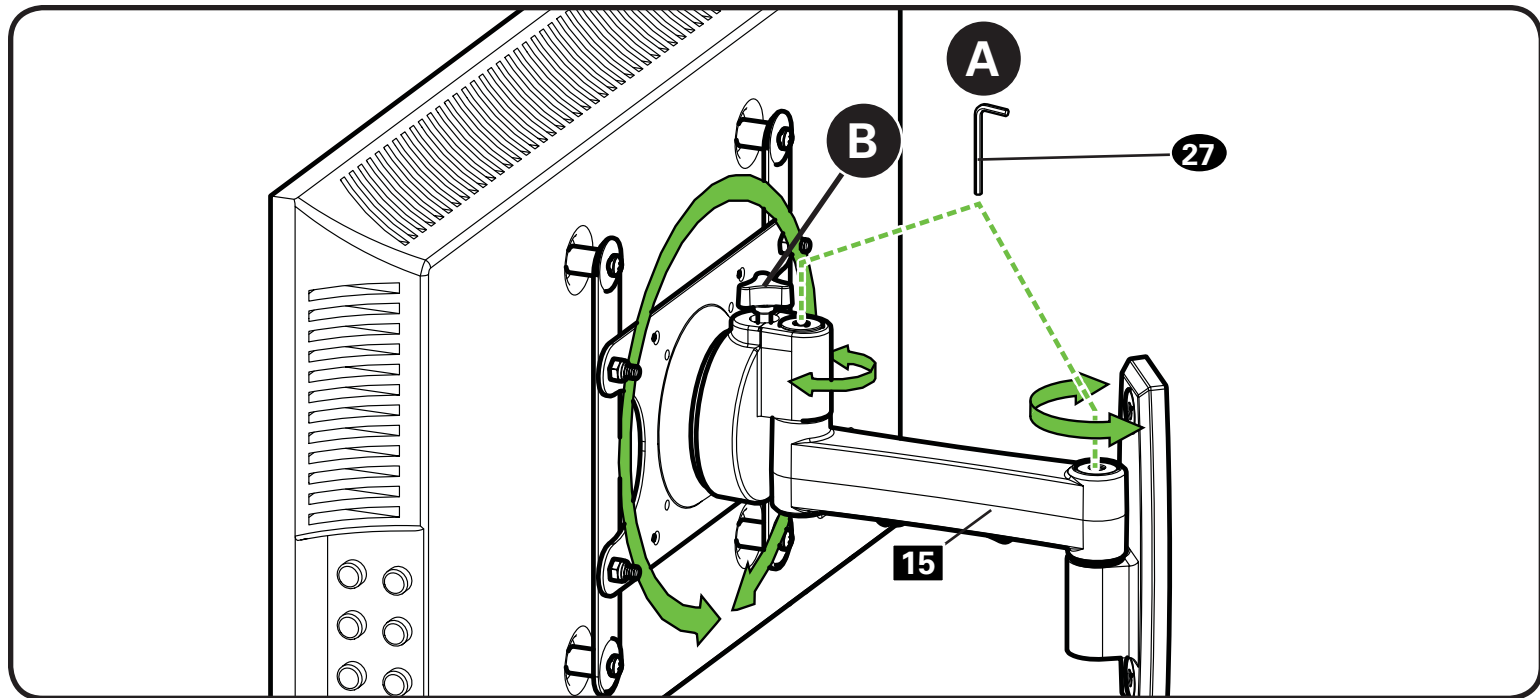


Manage Cables

Parts and Hardware for Manage Cables

⚠ WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

Cable Plate

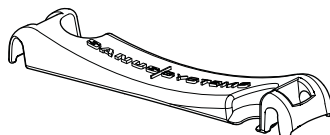

28 x1


Cable Plate Screws



8-32 x 1/2 in.

29 x2

Cable Ties



30 x2

Manage Cables


Option A:

Thread cable through the channel the secure with plate **28** and plate screws **29**.


Option B:

Install the plate **28** with plate screws **29**. Thread cable ties **30** through end holes in the plate **28**. Arrange cables, then secure them with the cable ties **30**.




 **NOTE:** Pull the arm to its full extension before routing the cables through the channel, then loosely route the cables. This will give the cables enough slack to prevent excess tension when adjusting the position of the arm.

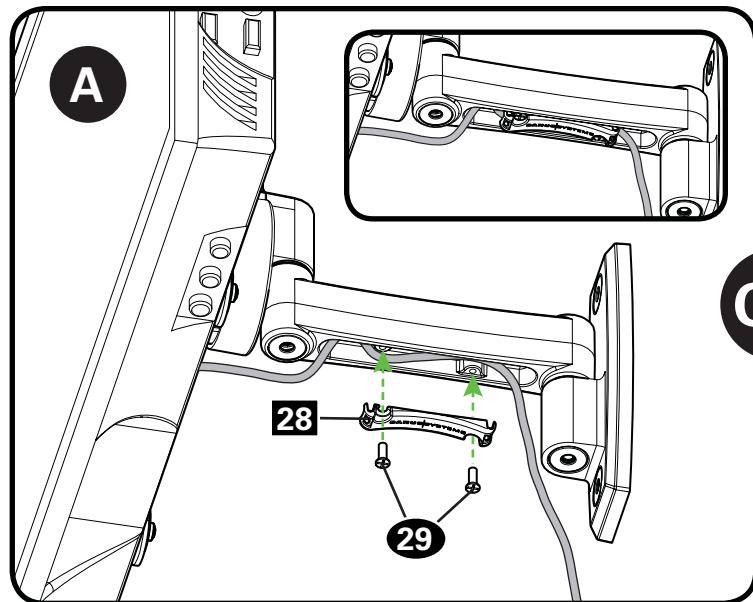

OR

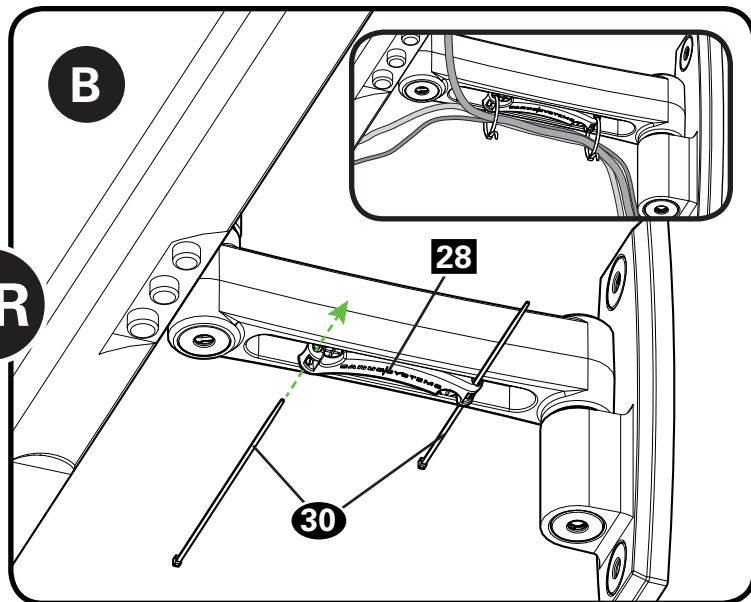

Dimensions

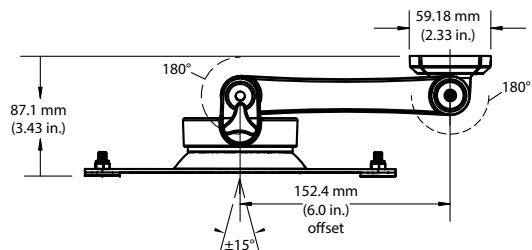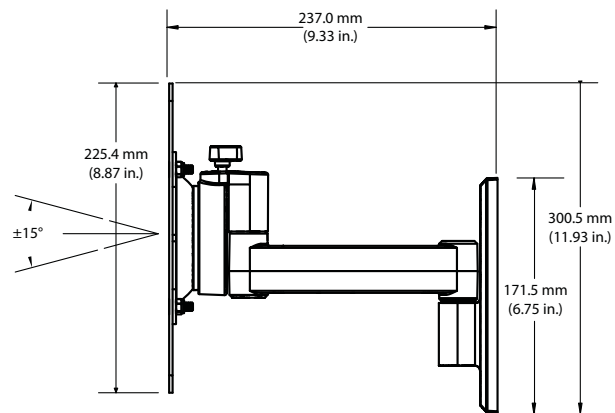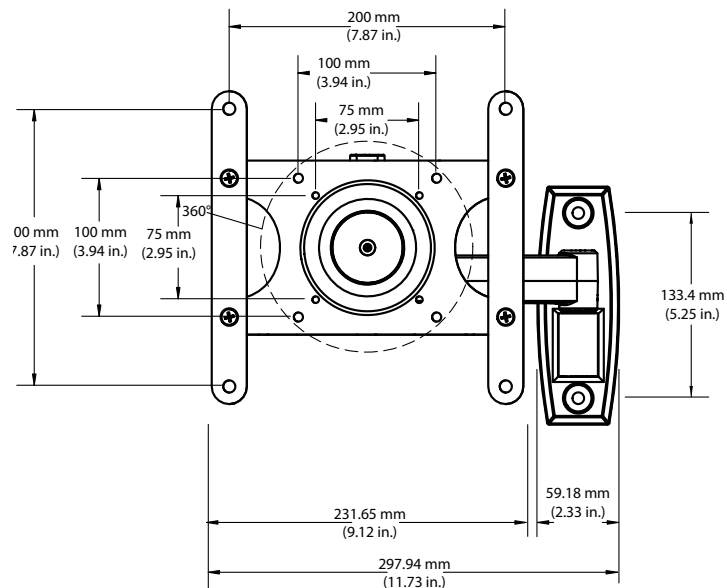

Antes de empezar, asegúrenos de que este soporte es perfecto para usted.

1

¿Su televisor pesa **más de 22,7 kg (50 lb)**, incluidos los accesorios?




No — ¡Perfecto!


Sí — Este soporte NO es compatible. Visite MountFinder.Sanus.com o llame al 1-800-359-5520 (Reino Unido: 0800-056-2853) para encontrar un soporte compatible.

2

¿De qué está hecha su pared?

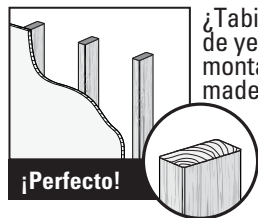

¿Tabiques de yeso con montantes de madera?

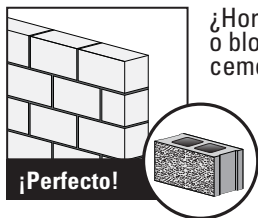

¿Hormigón sólido o bloques de cemento?



3

¿Tiene todas las herramientas necesarias?



Destornillador




Cinta métrica



Broca



Broca



Taladro eléctrico



Martillo



Llave de tubo



Lápiz

4

¿Listo para comenzar?

Lea estas instrucciones en su totalidad para estar seguro de sentirse cómodo con este fácil proceso de instalación. Consulte también el manual del usuario de su televisor para ver si existe algún requisito especial para instalar su televisor en la pared. Si no entiende las instrucciones o si tiene dudas acerca de la seguridad de la instalación, del ensamblado o del uso del producto, póngase en contacto con el servicio de atención al cliente al 1-800-359-5520 (Reino Unido: 0800-056-2853).

⚠️PRECAUCIÓN: Evite posibles lesiones personales y daños materiales.

- Este producto incluye instrucciones y elementos de sujeción para su instalación en paredes con montantes de madera, en superficies de hormigón y sobre bloques de cemento. NO lo instale en tabiques únicamente de yeso.
- La pared debe soportar cinco veces el peso del televisor y del soporte juntos.
- No utilice este producto para ningún otro propósito que no sea el explícitamente especificado por el fabricante.
- El fabricante no se responsabiliza por ningún daño o lesión resultante del montaje incorrecto o de uso indebido.

PASO 1 Coloque el soporte en el televisor

Ver PÁGINA 5

Piezas y elementos de sujeción para el PASO 1

⚠ ADVERTENCIA: Este producto contiene piezas pequeñas que podrían causar asfixia si fuesen tragadas. Antes de comenzar a montar la unidad, verifique que todas las piezas estén incluidas y en buen estado. En caso de que falten piezas o alguna esté dañada, no devuelva el elemento defectuoso al distribuidor. Póngase en contacto con el servicio de atención al cliente. Nunca utilice piezas en mal estado.

📄 NOTA: No se utilizarán todos los elementos de sujeción incluidos.

1-1 Seleccione los tornillos del televisor

Enrosque manualmente los tornillos en los orificios roscados de la parte posterior del televisor para determinar el diámetro correcto de los tornillos (M4, M6 o M8) que se deben utilizar

⚠ PRECAUCIÓN: Verifique que la combinación de tornillo/ espaciador es correcta en el televisor.

Si el tornillo es demasiado corto no sujetará el televisor y si es demasiado largo dañará el televisor.

Se ilustran las configuraciones estándar. En caso de aplicaciones especiales, comuníquese con el Servicio de Atención al Cliente.

1-3 Mida el patrón de orificios del televisor

1-4 Coloque el soporte del televisor

Coloque el soporte del televisor **01** sobre el patrón de orificios de su televisor e instálelo utilizando la combinación de tornillos, arandelas y espaciadores (si son necesarios) que ha seleccionado para su televisor.

1-2 Espaciadores

El tipo de televisor le ayudará a determinar la configuración de elementos de sujeción que debe utilizar. Compruebe la configuración de elementos de sujeción recomendada para su tipo de televisor en la página siguiente.

- A.** Opción de instalación sin espaciadores (televisores con parte posterior plana).
- B.** Opción de instalación con espaciadores (televisores con parte posterior obstruida u orificios de montaje empotrados).

PASO 2 Coloque la placa de pared en la pared

Ver PÁGINA 13

Para instalaciones en montante de madera, siga el PASO 2A de la PÁGINA 14

Para instalaciones en hormigón, siga el PASO 2B de la PÁGINA 16

Piezas y elementos de sujeción para el PASO 2

⚠ ADVERTENCIA: Este producto contiene piezas pequeñas que podrían causar asfixia si fuesen tragadas. Antes de comenzar a montar la unidad, verifique que todas las piezas estén incluidas y en buen estado. En caso de que falten piezas o alguna esté dañada, no devuelva el elemento defectuoso al distribuidor. Póngase en contacto con el servicio de atención al cliente. Nunca utilice piezas en mal estado.

📄 NOTA: No se utilizarán todos los elementos de sujeción incluidos.

PASO 2A

Opción de montante de madera

Ver PÁGINA 14

⚠ PRECAUCIÓN: Evite posibles lesiones físicas y daños materiales.

- La mampostería que cubre la pared no debe superar los 16 mm (5/8")
- Tamaño mínimo del montante de madera: común 51 x 102 mm (2" x 4") nominal 38 x 89 mm (1½" x 3½")
- Debe verificarse el centro del montante

1. Localice un clavo/tornillo del montante utilizando el localizador de montantes magnético de Sanus **16** suministrado.
2. Localice los bordes del montante utilizando la sonda del localizador de montantes **16**.
3. Marque el centro del montante con un lápiz.
4. Coloque la plantilla de la placa de pared **14** a la altura que desee y posicione los orificios perforados sobre la línea central del montante. Nivele la plantilla de la placa de pared **14** y péguela con cinta adhesiva en su posición.

📄 NOTA: Si necesita ayuda para determinar la posición de la placa de pared, consulte Height Finder en sanus.com.

🟡 IMPORTANTE: Asegúrese de hacer las marcas y taladrar en el centro del montante.

* **⚠ ADVERTENCIA:** Este producto contiene un imán. Si está utilizando un dispositivo médico implantado como un marcapasos o un desfibrilador cardioversor implantable (DCI), los campos magnéticos pueden afectar al funcionamiento de esos dispositivos y producir lesiones graves o la muerte. Si tiene un dispositivo médico implantado, mantenga una distancia mínima de 13 cm (5") entre su dispositivo y el imán.

Consulte con un médico o un profesional sanitario antes de utilizar este producto.

5. Taladre los dos orificios guía utilizando una broca de 5,5 mm (7/32") de diámetro.

❗ IMPORTANTE: Los orificios guía deben taladrarse hasta una profundidad de 75 mm (3").

6. Retire la plantilla de la placa de pared **14**. Apriete los pernos tirafondo **17** solo hasta que las arandelas **18** queden firmemente sujetas contra la placa de pared **15**.

⚠ PRECAUCIÓN: El uso incorrecto podría reducir la capacidad de sujeción del perno tirafondo. Para evitar posibles lesiones o daños materiales, no apriete excesivamente los pernos tirafondo **17**.

Coloque las cubiertas **20** sobre los pernos tirafondo **17**.

PASO 2B Opción de hormigón macizo o bloque de hormigón

Ver PÁGINA 16

⚠ PRECAUCIÓN: Evite posibles lesiones personales y daños materiales.

- Monte el conjunto de brazo/placa de pared **15** directamente sobre la superficie de hormigón
- Grosor mínimo del hormigón macizo: 203 mm (8")
- Tamaño mínimo del bloque de hormigón: 203 x 203 x 406 mm (8 x 8 x 16")

1. Coloque la plantilla de la placa de pared **14** sobre la pared a la altura deseada. Nivela la plantilla de la placa de pared y marque la posición de los orificios.

📄 NOTA: Si necesita ayuda para determinar la posición de la placa de pared, consulte Height Finder en sanus.com.

2. Taladre los dos orificios guía utilizando una broca de 10 mm (3/8") de diámetro.
! IMPORTANTE: Los orificios guía deben taladrarse hasta una profundidad de 75 mm (3"). Nunca taladre sobre el cemento entre los bloques.
3. Retire la plantilla de la placa de pared **14** e inserte dos tacos **19**.
! PRECAUCIÓN: Asegúrese de que los tacos **19** estén asentados al mismo nivel de la superficie de hormigón.
4. Apriete los pernos tirafondo **17** solo hasta que las arandelas **18** queden firmemente sujetas contra la placa de pared **15**.
! PRECAUCIÓN: El uso incorrecto podría reducir la capacidad de sujeción del perno tirafondo. Para evitar posibles lesiones o daños materiales, no apriete excesivamente los pernos tirafondo **17**.
5. Coloque las cubiertas **20** sobre los pernos tirafondo **17**.

PASO 3 Cuelgue el soporte de televisor en el brazo

Ver PÁGINA 18

Piezas y elementos de sujeción para el PASO 3

! ADVERTENCIA: Este producto contiene piezas pequeñas que podrían causar asfixia si fuesen tragadas. Antes de comenzar a montar la unidad, verifique que todas las piezas estén incluidas y en buen estado. En caso de que falten piezas o alguna esté dañada, no devuelva el elemento defectuoso al distribuidor. Póngase en contacto con el servicio de atención al cliente. Nunca utilice piezas en mal estado.

1. Coloque la tuerca **23** y la cubierta **20** en la parte inferior del brazo de montaje **15**.
2. Coloque la arandela **22** y la clavija pivotante **21** sobre el brazo de montaje **15**.
3. Ajuste el soporte **01** sobre la clavija pivotante **21**. Deslice las arandelas **26** y el espaciador **25** sobre el perno de montaje **24** y pase el perno a través del soporte de montaje **01** y la clavija pivotante **21** hasta que se encuentre con la tuerca **23**. Coloque la cubierta **20** sobre el perno de montaje.

! PRECAUCIÓN: Necesitará ayuda para realizar esta operación.

4. Utilice la llave hexagonal **27** para apretar el perno de montaje **24** y fije el soporte de montaje al brazo.

Ajustes

Ver PÁGINA 20

A: Utilice la llave hexagonal **27** para ajustar la tensión de extensión del brazo.

B: Ajuste la tensión del giro a la izquierda/derecha.

Organización de cables

Ver PÁGINA 21

Piezas y elementos de sujeción para el PASO 3

⚠ ADVERTENCIA: Este producto contiene piezas pequeñas que podrían causar asfixia si fuesen tragadas. Antes de comenzar a montar la unidad, verifique que todas las piezas estén incluidas y en buen estado. En caso de que falten piezas o alguna esté dañada, no devuelva el elemento defectuoso al distribuidor. Póngase en contacto con el servicio de atención al cliente. Nunca utilice piezas en mal estado.

Opción A:

Enrosque el cable a través de los canales y fíjelo con las placas **28** y los tornillos de placa **29**.

Opción B:

Instale las placas **28** con los tornillos de placa **29**. Enrosque los sujetacables **30** a través de los orificios de los extremos de las placas **28**. Organice los cables y fíjelos con los sujetacables **30**.

🔧 NOTA: Tire del brazo hasta su extensión máxima antes de pasar los cables a través de los canales y después dirija los cables sin una tensión excesiva. De este modo los cables tendrán holgura suficiente para evitar un exceso de tensión al ajustar la posición del brazo.

Dimensiones

Ver PÁGINA 23

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Milestone AV Technologies y sus empresas asociadas y filiales (colectivamente "Milestone") tienen la intención de que este manual sea preciso y completo. Sin embargo, Milestone no garantiza que la información que contiene incluya todos los detalles condiciones y variaciones, ni que contemple toda posible contingencia en conexión con la instalación y uso de este producto. La información contenida en este documento es susceptible de ser modificada sin aviso ni obligación de ningún tipo. Milestone no hace ninguna manifestación de garantía, explícita o implícita, respecto a la información contenida este documento. Milestone no asume ninguna responsabilidad por la exactitud, integridad o suficiencia de la información contenida en este documento.

FOLLOW **SANUS** ON YOUR FAVORITE SOCIAL NETWORKS!

[FACEBOOK.COM/SANUSSYSTEMS](https://www.facebook.com/SANUSSYSTEMS)



Learn ways to get the most out of your space.
Find product updates and more.

[TWITTER.COM/SANUSSYSTEMS](https://twitter.com/SANUSSYSTEMS)



Learn installation tips, tricks and household know-hows.

[YOUTUBE.COM/SANUSSYSTEMS](https://www.youtube.com/SANUSSYSTEMS)



View step-by-step product videos to ease your install experiences.
Find the latest news stories about your favorite SANUS products.

REGISTER YOUR NEW **SANUS** PRODUCT!

1

By registering, you'll be entered to win, and will receive the latest product updates, design tips, and other ways to enhance your life in your home.

2

Visit **SANUS.com/register** to complete your registration and start enjoying all of the benefits SANUS has to offer.

3

Leave a product review and let us know how your install went!



If you ever have questions about your SANUS product, give us a call at 1-800-359-5520. We're ready to help!

'Monthly prize' rules and restrictions apply. Visit SANUS.com for more info.

800-359-5520 (UK: 0800-056-2853) • info@sanus.com • sanus.com

©2014 Milestone AV Technologies. All rights reserved. SANUS is a division of Milestone.
All other brand names or marks are used for identification purposes and are trademarks of their respective owners.

SANUS • 6436 City West Parkway • Eden Prairie, MN 55344 USA

6901-002361 00