
INSTRUCTION BOOK FOR
Pivoting Da-Lift 26P and 33P



Important Safety Instructions

When using your video equipment, basic safety precautions should always be followed, including the following:

1. Read and understand all instructions before using.
2. Position the cord so that it will not be tripped over, pulled, or contact hot surfaces.
3. If an extension cord is necessary, a cord with a current rating at least equal to that of the appliance should be used. Cords rated for less amperage than the appliance may overheat.
4. To reduce the risk of electric shock, do not disassemble this appliance. Contact an authorized service dealer when repair work is required. Incorrect reassembly can cause electric shock when the appliance is used subsequently.
5. The use of an accessory attachment not recommended by the manufacturer may cause a risk of fire, electric shock, or injury to persons.

Save These Instructions

Required Tools

- 7/16" wrench
- 1/2" wrench
- 9/16" wrench
- Phillips screwdriver

Included Parts

Item	Description	QTY
1	Da-Lift Package Set	1
A	Cable Tie, Reusable 7"	6
B	Cable Tie, 8"	4
C	Screw, BHSCS 3M x 10mm	4
D	Washer, Flat #5	4
E	Wrench, Allen 2mm Pin in Hex	1
F	Wrench, Allen 5/32" Package Set	1
G	Screw, SHCS M6 x 20mm	4
H	Washer, Flat 1/4"	4
J	Wrench, Allen 5mm Package Set	1
K	Screw, SHCS M5 x 20mm	4
L	Screw, SHCS M4 x 12mm	4
M	Washer, Flat #10	4
N	Washer, Flat #8	4
P	Wrench, Allen 4mm	1
Q	Wrench, Allen 3mm Package Set	1
R	Switch, Low Voltage Wall	1
S	Plate, Wall Switch Package Set	1
T	Wire Nut, Orange #20 Package Set	6
U	Screw, Machine #6-32 x 1"	2



Important Installation Notes

This product is designed for ceiling installation only. Qualified personnel using the appropriate fasteners should mount the Pivoting Da-Lift. The surface to which this unit is mounted must be capable of supporting a static load of four times the combined weight of the projector and mount. Do not attach to plaster or drywall alone.

If installing this unit in "other space used for environmental air", it must be installed with the plenum cover available from Da-Lite Screen.

This unit must be installed in accordance with the requirements of the Local Building Codes, the Canadian Electrical Code (CEC), CAN/CSA C22.1 and the National Electrical Code (NEC), NFPA 70.

Suitable for Use in Other Environmental Air Space in Accordance with Section 300.22(c) of the National Electrical Code, and Sections 2-128, 12-010(3) and 12-100 of the Canadian Electrical Code, Part 1, CSA C22. 1.

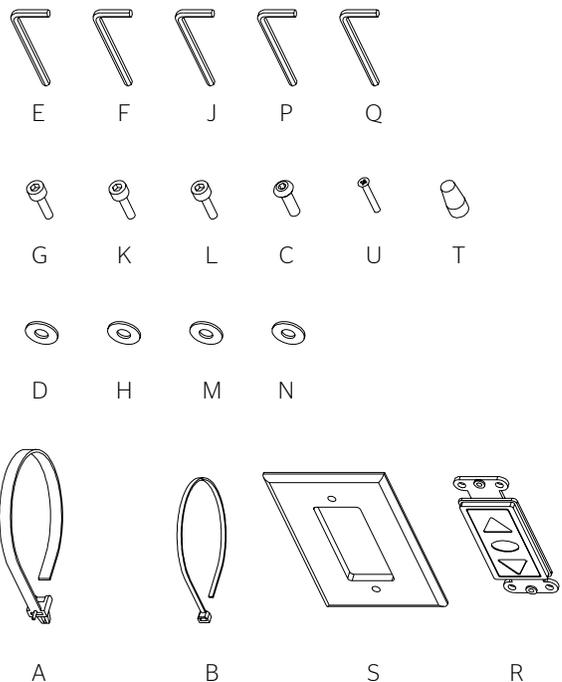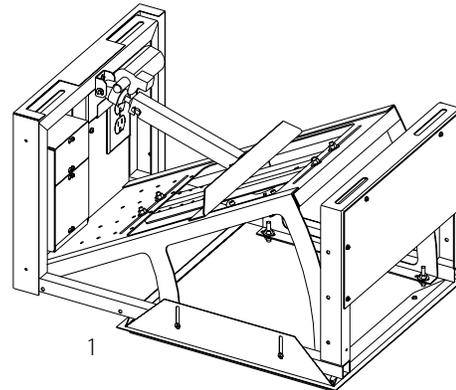

Procedure

- The following procedure is shown with suspended ceiling construction but the Pivoting Da-Lift will work with drywall ceiling. Remove contents from carton and examine for damaged or missing parts.

If installing the Pivoting Da-Lift with a plenum cover, fasten Plenum Cover Bottom to Da-Lift first. See Plenum Cover instruction sheet Steps #1 and #2.

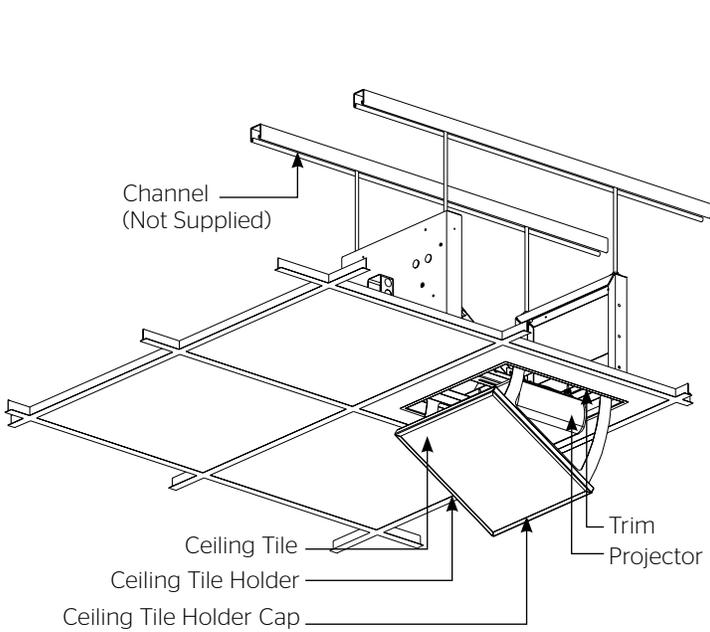


Figure 2

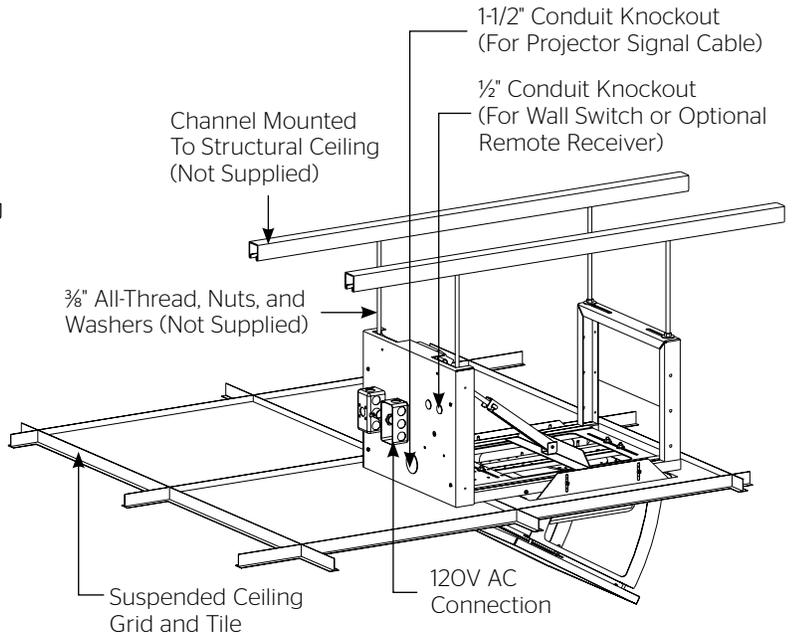


Figure 1

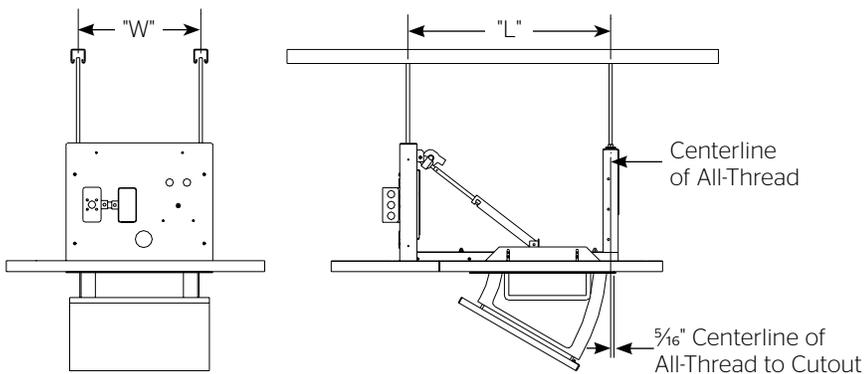


Figure 3

Da-Lift Model	"L"	"W"
26P	23-1/2"	7" TO 14-1/4"
33P	30-1/2"	11-1/2" TO 18-3/4"

Procedure

2. Remove Trim piece from Da-Lift. See Figure 4. Save the fasteners.
3. Remove Universal Projector Mount from Da-Lift. See Figure 5. Save the fasteners.
4. Secure Universal Projector Mount to projector. See Figure 6.
5. Secure the projector and mount to the Da-Lift. Use the features shown to adjust the projector's position. See Figure 3 and 7. Projector lens should not protrude past all-thread centerline.
6. Determine where the projector will be located and make a hole in the ceiling and create a tile for the Da-Lift. See Figure 3 & 8.

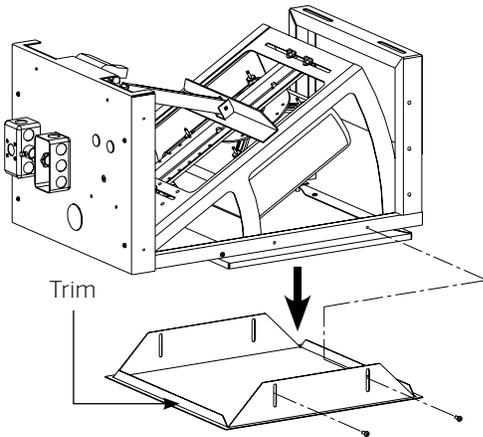


Figure 4

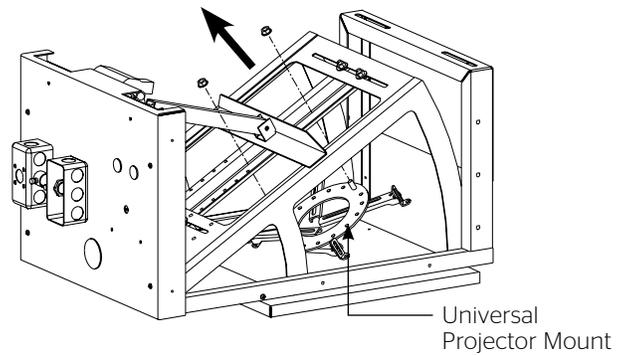


Figure 5

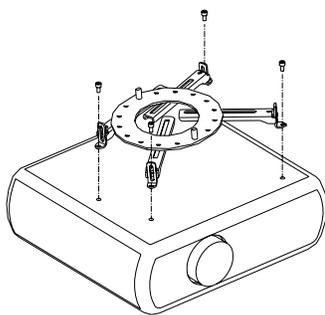


Figure 6

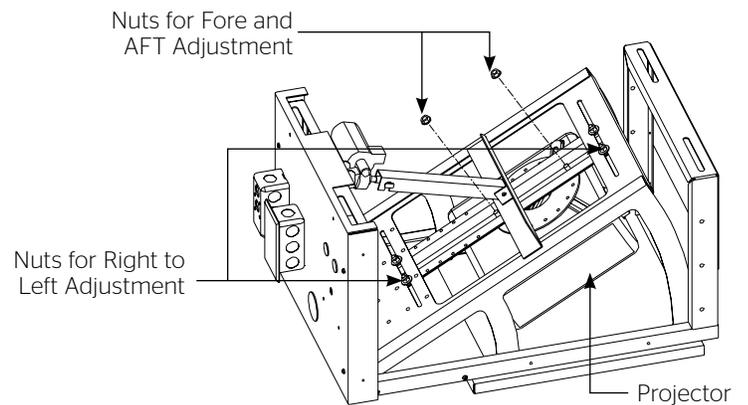


Figure 7

Procedure (Continued)


7. The Da-Lift comes with factory installed preset limit switches. See Figure 9. If obstructions above the ceiling will prohibit easy access to the switches, the switches may be moved to the opposite side of the Da-Lift.

The "up" and "down" positions of the projector may be changed. To allow the projector to go higher, raise the "Up" Limit Switch Bracket. To allow the projector to go lower, increase the height of the "Down" Limit Switch Stop Brackets. There are safety stops to keep the projector from going too far. Do not allow the Da-Lift to hit the safety stops.

8. Attach Da-Lift to the structural ceiling. See Figure 10.
9. Lower Da-Lift by connecting the power supply to 120 volt or 220 volt AC power. Use the switch shown to operate the Da-Lift. See Figure 11. The "Stop" button is needed only for intermediate stopping.

⚠ WARNING! Avoid pinch points when operating Da-Lift with built-in switch.

⚠ AVERTISSEMENT! Évitez les points de pincement lorsque le Da-Lift avec interrupteur intégré est mis en marche.

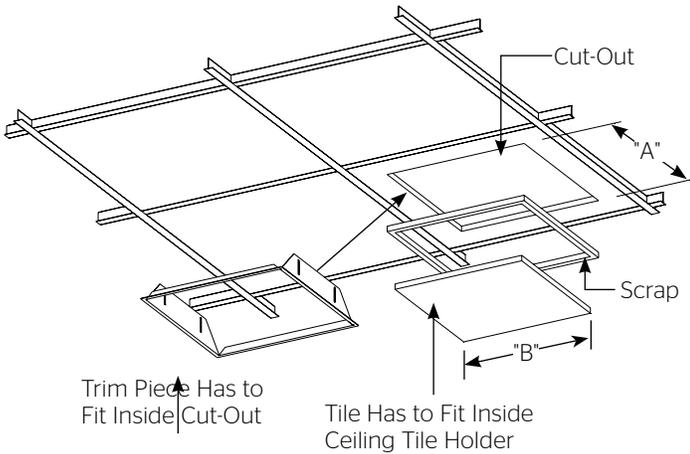

Da-Lift Model	"A"	"B"
26P	16-1/2"	15-3/8"
33P	21"	19-3/8"

NOTE: Cut-Outs are square. Tolerances are $\pm 1/8$ ".

Figure 8

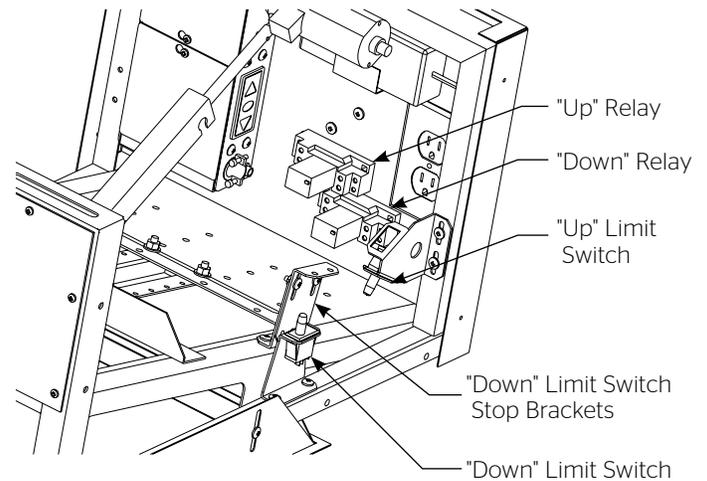


Figure 9

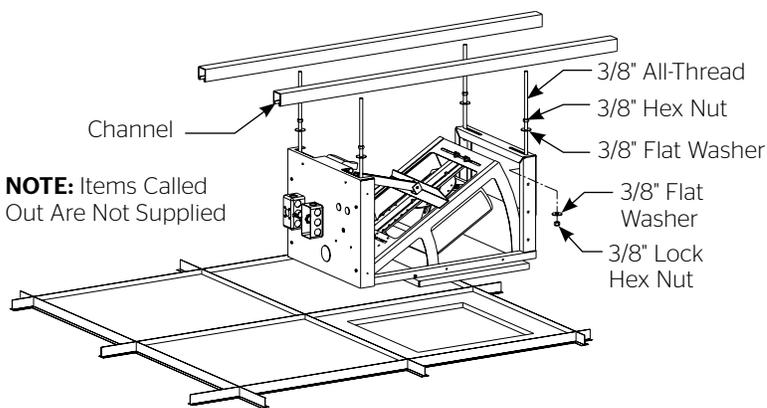


Figure 10

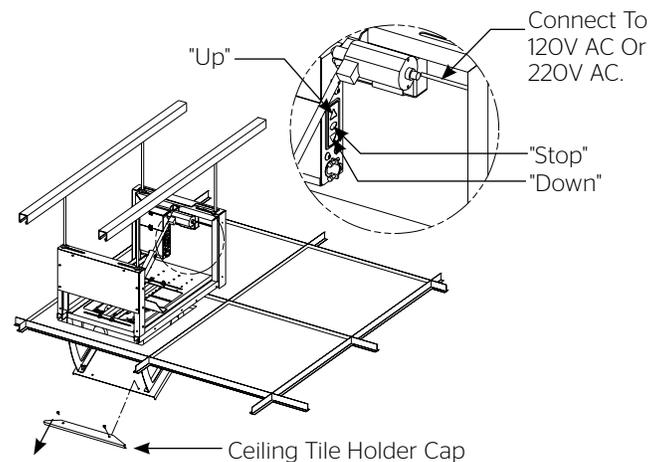


Figure 11

Procedure (Continued)

10. Power the projector and adjust projector location.
11. Remove Ceiling Tile Holder Cap from Da-Lift. Install Ceiling Tile cutout from step 6 into Ceiling Tile Holder and assemble Ceiling Tile Holder Cap. See Figure 12.
12. Install Trim Piece onto Da-Lift. See Figure 13. You may need to adjust the position of the Ceiling Tile Holder to clear the Trim.
13. Use provided Cable Ties for cable management. See Figure 14. Allow enough slack in the cords for projector movement. If Da-Lift is a 220V version, use the supplied electrical adapter.
14. Use a licensed electrician to wire the Da-Lift. See Figure 15 (120 volt) or Figure 16 (220 volt). Plug the power supply into the receptacle of the Da-Lift.

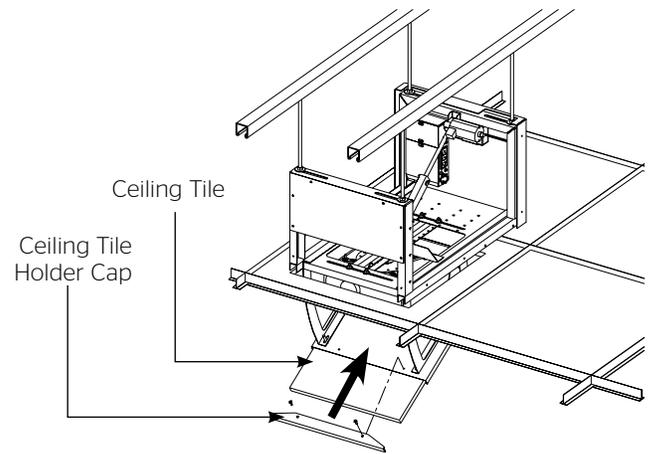


Figure 12

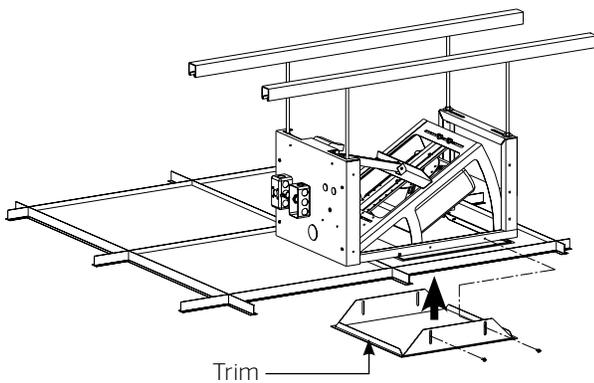


Figure 13

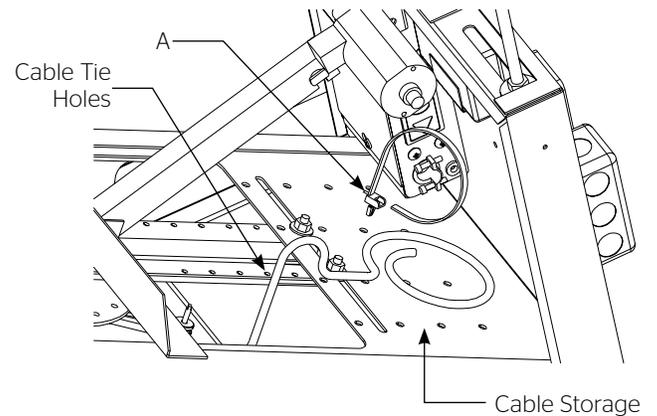


Figure 14

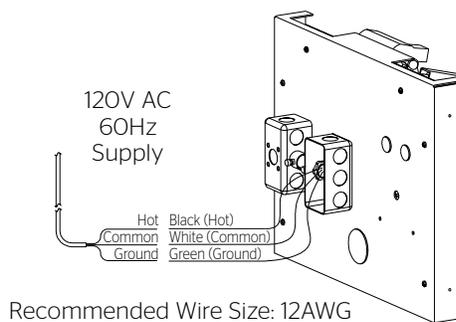


Figure 15

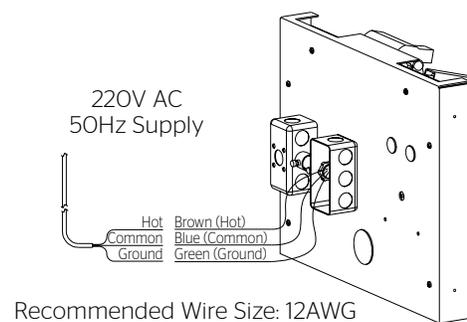


Figure 16


Procedure (Continued)

15. Wire the wall switch supplied with the Da- Lift. See Figure 17.
16. A control panel may be connected to the Da-Lift by using the wall switch wire leads. The control panel must provide a momentary, dry contact closure of at least 1/2 second.
 - a. Use 3-conductor 20-24 AWG wire to connect the control panel to the wall switch leads. See Figure 17.
 - b. A momentary closure across the white and red wires will be an "up" command.
 - c. A momentary closure across the white and black wires will be a "down" command.
 - d. A momentary closure across the white, red, and black wires will be a "stop" command.

⚠ CAUTION: Never apply voltage to the wall switch leads or the Da-Lift will be damaged.

⚠ ATTENTION: N'appliquez jamais une tension aux fils du commutateur mural sinon le Da-Lift sera endommagé.

17. Optional Infrared (IR) or Radio Frequency (RF) remote controls are available. To install either remote, remove the Covers from the Control Box. Route the Receiver Cable through the Da-Lift and plastic bushing of the Control Box. Plug the Receiver Cable into the motor control board port labeled "EYE". See Figure 18. Plug IR or RF receiver into other end of Receiver Cable. "Learn" the RF remote and receiver by following the directions supplied with the RF.

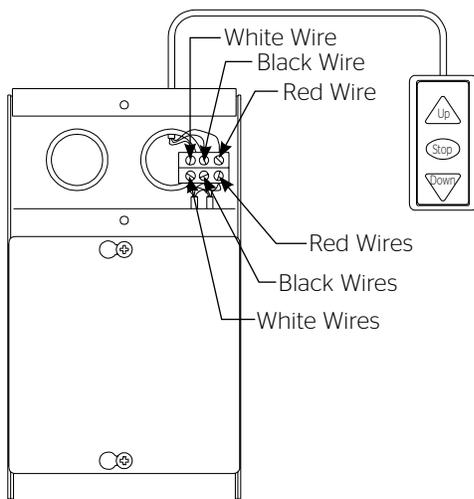

Recommended Wire Size: 20-24 AWG

Figure 17

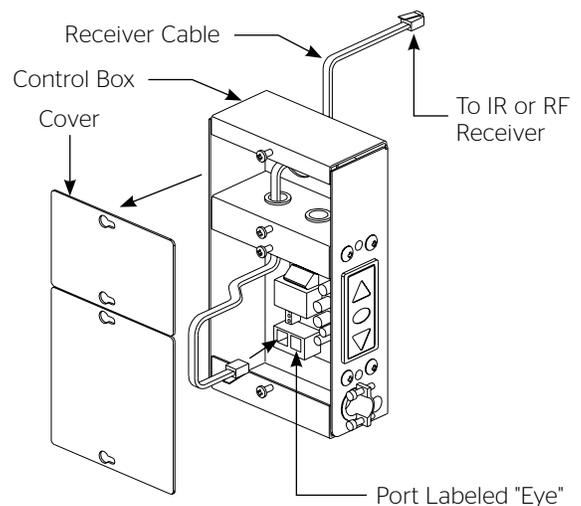


Figure 18

LIMITED FIVE YEAR WARRANTY ON DA-LITE PRESENTATION PRODUCTS

Milestone AV Technologies LLC warrants certain Da-Lite branded products to the original purchaser only, to be free from defects in materials and workmanship for a period of five (5) years from the date of purchase by the original purchaser; provided they are properly operated according to Da-Lite's instructions and are not damaged due to improper handling or treatment after shipment from the factory.

This warranty does not apply to equipment showing evidence of misuse, abuse or accidental damage, or which has been tampered with or repaired by a person other than authorized Da-Lite personnel.

Da-Lite's sole obligation under this warranty shall be to repair or to replace (at Da-Lite's option) the defective part of the merchandise. Returns for service should be made to your Da-Lite dealer. If it is necessary for the dealer to return the screen or part to Da-Lite, transportation expenses to and from Da-Lite are payable by the purchaser and Da-Lite is not responsible for damage in shipment. To protect yourself against damage or loss in transit, insure the product and prepay all transportation expenses.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES AS TO FITNESS FOR USE AND MERCHANTABILITY. Any implied warranties of fitness for use, or merchantability, that may be mandated by statute or rule of law are limited to the five (5) year warranty period. This warranty gives you specific legal rights, and you may also have other rights, which vary from state-to-state. **TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, NO LIABILITY IS ASSUMED FOR EXPENSES OR DAMAGES RESULTING FROM INTERRUPTION IN OPERATION OF EQUIPMENT, OR FOR INCIDENTAL, DIRECT, OR CONSEQUENTIAL DAMAGES OF ANY NATURE.**

In the event that there is a defect in materials or workmanship of a Da-Lite product, you may contact our Customer Care Specialists at 3100 North Detroit Street, Warsaw, IN 46582, (574) 267-8101, (800) 622-3737.

IMPORTANT: THIS WARRANTY SHALL NOT BE VALID AND DA-LITE BRANDED PRODUCTS SHALL NOT BE BOUND BY THIS WARRANTY IF THE PRODUCT IS NOT OPERATED IN ACCORDANCE WITH THE DA-LITE WRITTEN INSTRUCTIONS.

Keep your sales receipt to prove the date of purchase and your original ownership.



FOR YOUR IMAGE | legrandav.com

USA P 866.977.3901 E info@da-lite.com
CANADA P 877.345.4329 E canadainfo@milestone.com
EMEA P +31 495 580 840 E emea.sales@milestone.com
APAC P +852 2145 4099 E asia.da-lite@milestone.com

In British Columbia, Milestone AV Technologies ULC carries on business as MAVT Milestone AV Technologies ULC.
©2018 Milestone AV Technologies. DL-0606 (Rev. 2) 7/18 Da-Lite is a registered trademark of Milestone AV Technologies. All other brand names or marks are used for identification purposes and are trademarks of their respective owners. All patents are protected under existing designations. Other patents pending.